

Disposal

The product and its packaging have been manufactured from valuable materials that can be recycled. Recycling reduces the amount of refuse and preserves the environment.

Dispose of the **packaging** at a recycling point that sorts materials by type. Make use of the local facilities provided for collecting paper, cardboard and lightweight packaging.

 


Appliances marked with this symbol must not be disposed of along with normal household waste!

Model:
SI 801

Manufactured by:
Jaxmotech GmbH
Ostring 60
66740 Saarlouis
Germany
info@jaxmotech.de

Steam iron

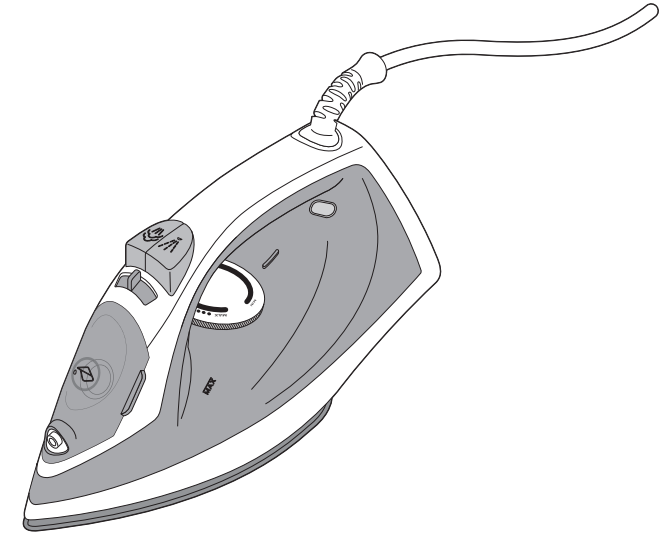

en Instructions for use

Dear Customer

Your new iron can be used for both dry and steam ironing.

The integrated steam burst function makes it easier to smooth stubborn wrinkles and create intentional creases.

You can also use this function to smooth hanging garments and textiles.

We hope you will be entirely satisfied with your new steam iron.

Contents

2 About these instructions	11 Ironing	15 After use
3 Safety warnings	11 Switching on the iron	16 Cleaning
7 At a glance (features)	11 Dry ironing	16 Using the self-cleaning function
8 Prior to first use	11 Steam ironing	16 Cleaning the iron
8 Unpacking the iron	12 Ironing with the steam burst function	18 Descaling
8 Removing polish residue	13 Spraying water	18 Storage
9 Filling with water	13 Smoothing hanging garments and textiles	19 Problems / solutions
10 Setting the temperature	15 Automatic switch-off	19 Technical specifications
		20 Disposal

Problems / solutions

Not working	• Is the plug inserted in the power socket? • Do other appliances plugged into this power socket function?
No steam is emitted.	• Is the water tank empty? • Was the steam control pushed to .
No water is discharged from the spray nozzle.	• Is the water tank empty?
During steam ironing, water drips from the steam outlets in the soleplate.	• Is the temperature control dial set to a temperature that is too low?

Technical specifications

Model:	SI 801
Product number:	765 906 (D / A), 765 907 (CH)
Mains voltage:	220-240 V ~ 50-60 Hz
Protection class:	I 
Power:	1800-2200 W
Water tank capacity:	220 ml
Ambient temperature:	+10 to +40 °C
Manufactured by:	Jaxmotech GmbH Ostring 60 66740 Saarlouis Germany info@jaxmotech.de

In the course of product improvement, we reserve the right to make technical and optical modifications to the product.



Descaling

When tap water is used, limescale deposits build up, which gradually impede the release of steam. You should therefore descale the iron at regular intervals.



For the sake of the environment, we recommend the use of vinegar or citric acid.

Dosing: 4 parts water, 1 part vinegar or citric acid. Commercially available descaling agents are chemical products.

1. Pour the solution with the descaling agent into the water tank up to the **MAX** mark.
2. Place the iron in an upright position and leave the solution to work for about an hour.
3. Shake the iron slightly.
4. Then pour out the solution.
5. Fill the water tank half full with clear water and shake the iron slightly.

6. Pour out the water and repeat the rinsing process two more times with clear water.
7. Remove any remaining water from the tank by pressing the spray button repeatedly.

Storage

Store the iron in an upright position.

About these instructions

This product is equipped with safety features. Nevertheless, read the safety warnings carefully and only use the product as described in these instructions to avoid accidental injury or damage.

Keep these instructions for future reference. If you give this product to another person, remember to also include these instructions.

Symbols used in these instructions:



This symbol warns you about the risk of injury.



This symbol warns you about the risk of injury caused by electricity.

Signal words in these instructions:

DANGER warns about the imminent risk of serious or fatal injury.

WARNING warns about the potential risk of serious or fatal injury.

CAUTION warns about the potential risk of minor injury.

NOTICE warns about the potential risk of material damage.



This indicates additional information.

Safety warnings

Intended use

• The iron is designed for ironing commercially available garments.

• The product is suitable for use in dry indoor rooms.
• The product is designed for private use and is not suitable for commercial purposes.

Danger to children and to people with limited ability to operate appliances

- This appliance may be used by children aged 8 and over, and by persons with reduced physical, sensory or mental capacities or a lack of sufficient experience and/or knowledge, provided they are supervised or have been trained in the safe use of the appliance and understand the potential dangers. Cleaning and maintenance must not be carried out by children without supervision. Children must not be allowed to play with the appliance. The iron and mains cable must be kept out of the reach of children under the age of 8 from the moment the appliance is switched on until it has completely cooled down.
- Keep the packaging materials out of the reach of children. They pose several risks, including the risk of suffocation!

Danger due to electricity

- Do not use the appliance if the appliance itself or its mains cable shows any signs of damage, if the appliance

has been dropped or if water is leaking out. If you find that the mains cable, plug, housing or any other part shows signs of damage, discontinue use of the iron until the damage has been properly repaired.

- Do not make any modifications to the product. Do not attempt to replace the mains cable yourself. Have repairs to the product or the mains cable carried out only by a specialist workshop or someone with similar qualifications. Improper repairs can result in considerable danger to the user.
- Remove the mains plug from the power socket, ...
... before filling the appliance with water or pouring water out,
... if you stop using the appliance (even just a short interruption),
... if malfunctions occur during use,
... during thunderstorms and
... before cleaning the appliance.
- Always turn the temperature control dial anti-clockwise as far as it will go before pulling the mains plug out of the socket.

Cleaning the iron



WARNING - risk of fatal electric shock

Remove the mains plug from the power socket before cleaning the appliance.



CAUTION risk of burns

Allow the appliance to cool down before cleaning it.

1. Unplug the mains plug from the power socket and wait until the iron cools down completely.
2. If necessary, wipe the housing with a slightly dampened cloth. Limescale and other residues on the soleplate can also be removed with a damp cloth.

3. Clean the inside of the water tank from time to time. To do so, pour a little water into the tank and shake the iron slightly. Pour out the water again and allow the tank to dry.

Remove any remaining water from the tank by pressing the spray button  repeatedly.



If you iron an item of clothing that has synthetic fibres at a temperature that is too hot and the fibres stick to the soleplate as a film, heat up the iron and iron an old cotton cloth without steam until the soleplate is clean again.

Cleaning

Using the self-cleaning function

You should use the self-cleaning function at least once a month. It removes limescale deposits and dust particles from the soleplate.

 Depending on use and the hardness of the water used, it may be necessary to use the self-cleaning function more than once a month.

1. Fill the water tank **half full** with water (see "Filling with water").
2. Place the iron upright on its base.
3. Insert the mains plug into a power socket.
4. Turn the temperature control dial to ●●● and let the iron heat up until the temperature indicator lights up red.
5. Remove the mains plug from the power socket.
6. Hold the iron horizontally over a sink.

7. Push the steam control to  and hold it in this position.

Water and steam are discharged from the soleplate.

8. Shake the iron gently back and forth.
9. When the water tank is empty, let go of the steam control.
10. Insert the mains plug into a power socket.
11. Turn the temperature control dial to ●●● and let the iron heat up until the temperature indicator lights up red.
12. Iron a clean piece of cotton, e.g. an old towel. This removes the last limescale deposits and dust particles from the soleplate and the remaining water is discharged from the steam chamber.
13. Unplug the mains plug from the power socket and allow the iron to cool down.

To do so, always pull on the mains plug, not the mains cable.

- Only connect the appliance to a properly installed, earthed power socket with a mains voltage that complies with the technical specifications of the product.
- The iron can be filled with water, but it must never be immersed in water or other liquids. Otherwise, there is a risk of electric shock.
If water accidentally runs over the iron while the tank is being filled, the appliance must not be connected to the mains power until it is completely dry.
- Do not use the product outdoors or in locations with high humidity. Do not touch the product with wet hands.
- The mains cable must not be kinked or crushed. Keep the mains cable away from the hot soleplate, other sources of heat and sharp edges.
- Always unwind the mains cable completely before use and allow the appliance to cool down before rewinding the mains cable.

- Ensure that the power socket is easily accessible, so that the mains plug can be disconnected quickly if need be. Route the mains cable in such a way that it is not a tripping hazard.
- If an extension cable is required for operation, it must also comply with the "Technical specifications" of the product. Seek advice in a specialist shop when buying an extension cable.

Danger of fire, burns and scalds

- Do not leave the appliance unattended while it is connected to the power socket or while it is still hot.
-  Warning. Hot surface.
The emitted steam is extremely hot!
Touching the hot soleplate or the steam being emitted will lead to burns or scalds.
- Do not turn the hot iron so that the soleplate faces upwards, otherwise hot water may leak out.
- Never iron garments whilst they are being worn!
- Never point the soleplate at people or animals, especially if you are using the steam burst function.

- Allow the appliance to cool down completely before cleaning it or storing it away.

Material damage

- Use the iron on a sturdy surface and put it down only on a stable, flat, even surface so that it cannot fall.
- Only use the iron on garments that are suitable for ironing.
- Follow the instructions on the sewn-in labels of the garments to be ironed.
The ironing symbols on the temperature control dial correspond to the standard care symbols on the market. Polyacrylics, acetate-polyamide blends and similar materials must not be ironed.
- Do not scratch the soleplate. Do not scrape the soleplate over metal parts such as buttons, zips or the iron rest on your ironing board.
Deep scratches in the soleplate can cause damage to your garments.

- After use, to prevent the soleplate from being scratched, always place the iron upright on its base or on the iron rest on the ironing board intended for this purpose.
- Do not use abrasive or caustic cleaning agents, or hard brushes, etc., for cleaning.

Automatic shut-off

If the iron is not moved, it switches off
... in the horizontal position after approx. 30 seconds,
... in the vertical position after approx. 8 minutes.

If you hear beeps and the temperature indicator light is flashing, the iron has switched off automatically

As soon as you move the iron, it switches on again and the temperature indicator light lights up continuously again.

As soon as the temperature indicator light lights up red again, the iron is ready for use again.

After use

NOTICE - material damage

After use, to prevent the soleplate from being scratched, always place the iron upright on its base or on the iron rest on the ironing board intended for this purpose.

1. Turn the temperature control dial anti-clockwise as far as it will go.
2. Push the steam control to .
3. Remove the mains plug from the power socket.
4. Allow the iron to cool down completely.
5. Open the fill opening lid and hold the iron upside down over a sink to empty the water tank.
6. Remove any remaining water from the tank by pressing the spray button  repeatedly.
7. Now you can put the iron away.

3. Turn the temperature control dial to **MAX** and wait until the temperature indicator lights up red.
4. Hang the garments to be smoothed on a hanger. Hang trousers by the ends of the trouser legs.

 


CAUTION - risk of scalds and burns

- The emitted steam is extremely hot! Touching the hot soleplate or the steam being emitted will lead to burns or scalds.
- Never point the soleplate at people or animals.
- Do not turn the hot iron with the soleplate facing upwards, otherwise hot water may leak out.


5. Pull the fabric taut with your free hand.

6. Hold the iron vertically at a distance of approx. 10–15 cm from the fabric.

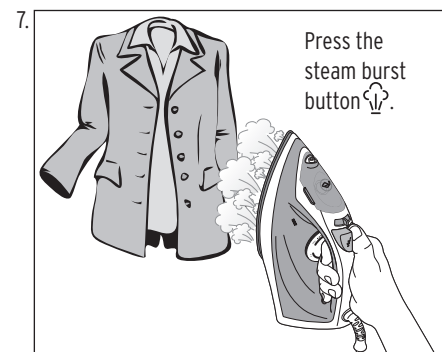

8. Wait a few seconds to allow the steam to penetrate the fabric before pressing the steam burst button again.
9. Leave the garment on the hanger to dry.

 At a glance (features)

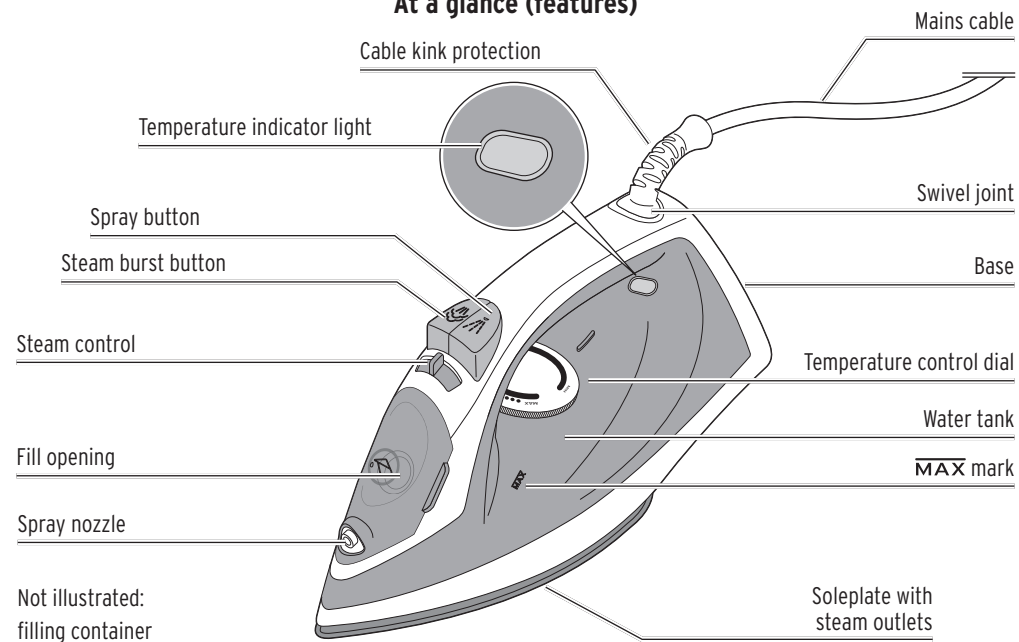

Prior to first use

Unpacking the iron



DANGER to children - risk of fatal injury by suffocation/choking

Keep the packaging materials out of the reach of children. Dispose of them immediately.

- Take the iron out of its packaging and remove all packaging materials.

Removing polish residue

Polish residue may have been left on the soleplate from the iron manufacturing process.

We therefore recommend that you first iron an old cotton cloth or something similar to remove any polish residue before using your new iron on your laundry, clothes, etc.

1. Fill the water tank up to the **MAX** mark (see chapter "Filling with water").
2. Iron an old cotton cloth using steam (see the section "Steam ironing" in the chapter titled "Ironing") until the water tank is empty and no more steam is emitted.



There may be a slight odour when using the appliance for the first time. This is harmless. Make sure there is sufficient ventilation.

Spraying water



To avoid stains, we recommend not spraying delicate fabrics such as silk and synthetics with water.

You can use the spray function at any time when steam or dry ironing. It does not depend on the selected temperature.

1. Point the spray nozzle at the area you want to moisten.
2. Press the spray button

Water sprays from the spray nozzle onto the garment to be ironed.



There may still be air in the spray nozzle. For this reason, press the spray button several times as necessary.

Smoothing hanging garments and textiles

You can use the steam burst with the iron held vertically to smooth almost all items of clothing and household textiles.

Observe the following information:

- Always follow the instructions on the sewn-in labels of the garments to be smoothed.
- You can smooth all textiles indicated in the care symbols with ●● and ●●● in the iron.
- With sensitive fabrics such as wool, wool mixtures, corduroy, velvet and silk, apply the steam at a generous distance from the fabric.
- Always test the iron on a non-visible section of the fabric first.
 1. Pour water into the water tank (see "Filling with water").
 2. Push the steam control to

3. Push the steam control to the desired amount of steam.

The setting for the amount of steam is infinitely variable from  = no steam

 
to  = maximum amount of steam.

If you hold the iron in a horizontal position, the soleplate emits steam.

Ironing with the steam burst function

You can also use the steam burst function when dry ironing.

However, make sure that the steam control is set to  so that no water drips from the soleplate.

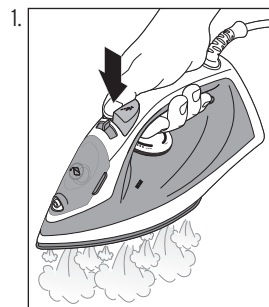

Press the steam burst button .

A burst of steam is emitted from the outlets in the soleplate.

 If necessary, press the steam burst button several times to activate the steam burst function.

2. Let go of the steam burst button again.

Allow the steam to penetrate the fabric for a few seconds before pressing the button again.

 Press the steam burst button three times at most after the temperature indicator lights up red. Then the iron must heat up again.

Filling with water



WARNING - risk of fatal electric shock

- Pull the mains plug out of the power socket before filling the iron with water or pouring it out.
- If water accidentally runs over the iron while the tank is being filled, the appliance must not be connected to the mains power until the appliance is completely dry.

 
In order to use the steam or spray function, you must fill the water tank.

1. Remove the mains plug from the power socket.

2. Push the steam control to .

No steam is emitted at this control setting.

3. Place the iron upright on its base and open the fill opening lid.

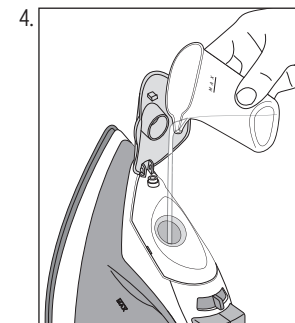

Use the filling container to pour water into the water tank through the fill opening. Do not fill beyond the **MAX** mark on the water tank.

5. If necessary, pour out any excess water. To do so, turn the iron upside down over a sink.

6. Close the fill opening lid again.

 
You must hear and feel the lid click into place.

Setting the temperature

NOTICE - material damage

Follow the instructions on the sewn-in labels of the garments to be ironed. The ironing symbols on the temperature control dial correspond to the standard care symbols on the market. Polyacrylics, acetate-polyamide blends and similar materials must not be ironed.

i Sort your laundry before ironing. The iron heats up faster than it cools down. Therefore, start with the garments that require the lowest ironing temperature.

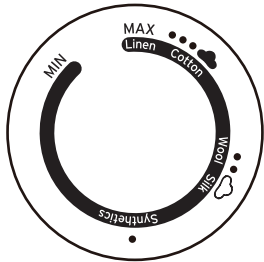

► Use the temperature control dial to set the temperature.

The dots on the temperature control dial have the following meanings:

● Synthetics Chemical fibres (synthetic fibres), e.g.: acrylan, dralon, leacryl, orlon, acetate, acryl, perlon, nylon. (no steam generated)

●● Wool and silk, e.g.: dacron, lilion, helion, rayon, polyester. (steam generated)

●●● Cotton Linen Fabrics that can be ironed at higher temperatures, e.g.: cotton, linen. (steam generated)

i If you do not know the fabric material, start ironing in an inconspicuous area and start at a low temperature to check the set temperature.

Ironing



WARNING - fire hazard

Do not leave the appliance unattended while it is connected to the power socket or while it is still hot.

Switching on the iron

The iron must heat up before you can iron:

1. Unwind the mains cable completely and insert the mains plug into an easily accessible, earthed power socket.

The temperature indicator light lights up red.

2. Turn the temperature control dial to the desired position.

The temperature indicator light lights up blue.

The temperature indicator light shows that the soleplate is heating up.

As soon as the temperature indicator lights up red, the soleplate has heated up.

Dry ironing

1. Push the steam control to

No steam is emitted at this control setting, but the steam burst function can still be used.

2. Wait until the iron has heated up and the temperature indicator lights up red.

Now you can start dry ironing.

Steam ironing

Steam ironing is only possible in the upper temperature range. This range is indicated on the temperature control dial with the symbol and **MAX**.

1. Set the temperature control dial to the indicated temperature range.
2. Wait until the iron has heated up and the temperature indicator lights up red.