 


Assembly

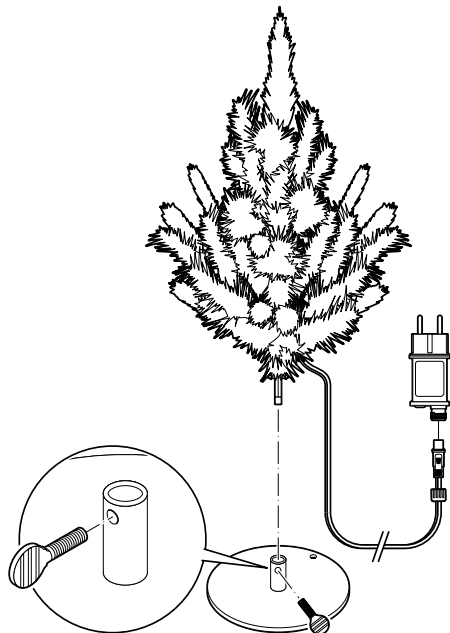

Safety warnings ⚠

Read the safety warnings carefully and only use the product as described in these instructions to avoid accidental injury or damage. Keep these instructions for future reference. If you give this product to another person, remember to also include these instructions.

 
The product is only suitable for decoration and not for lighting whole rooms. The product is designed for both indoor and outdoor use. It is designed for private use and is not suitable for commercial purposes.

- Keep packaging materials out of the reach of children. They pose several risks, including the risk of suffocation!
- Children are not aware of the risks involved in handling electrical devices incorrectly. Therefore, never allow children to use electrical devices unsupervised.
- Discontinue use of the product if the sealing ring in the protective cap is improperly mounted or damaged.
- Warning! The remote control contains a lithium battery. Lithium batteries can explode if inserted incorrectly. You should therefore ensure correct positioning of the poles (+/-) when inserting the battery. Use only batteries of the same or of equivalent type (see "Technical specifications").
- Swallowing batteries can be fatal. The remote control is fitted with a coin battery. Swallowing the coin battery can cause severe internal chemical burns and even death within 2 hours. Therefore, keep both new and old batteries and the product out of the reach of children. If the battery compartment does not close properly, discontinue use of the product and keep it out of the reach of children. If you think that a battery has been swallowed or has got into the body in any other way, seek medical advice immediately.
- Rapidly flashing lights can cause migraines. It can also cause seizures in persons with epilepsy or autism. Epileptic or fainting fits or migraines can also occur in those who have previously never suffered such problems. You should not use the LED Christmas tree if you or anyone in your family has a predisposition to such conditions. Parents should not leave children unsupervised with the LED Christmas tree. Should any of the following symptoms occur, switch off the LED Christmas tree immediately and consult a doctor: cramps, eye or muscle spasms, unconsciousness, involuntary movements or disorientation.

- The product is suitable for outdoor use and complies with protection type IP44. This means that the product is protected against contact with tools, wires and foreign objects with a diameter larger than 1 mm and splashes of water, such as rain. However, protect it from heavy rain and streams of water. Do not operate the product under water in any circumstances. This will immediately result in a short circuit and poses a risk of an electric shock.
- Only connect the product to a properly installed power socket with a mains voltage that complies with the technical specifications of the mains adapter. The LEDs cannot be dimmed. Never connect the product to dimmable power sockets.
- Do not use an extension cable.
- Always connect the connection cable to the mains adapter before you plug the mains adapter into the power socket. Always unplug the mains adapter from the power socket before disconnecting the connection cable from the mains adapter.
- Remove the mains adapter from the power socket ...
... if malfunctions occur during use,
... during thunderstorms,
... before cleaning the product.
Always pull on the mains adapter, not on the connection cable.
- The product must be used only with the mains adapter provided.
- The connection cable must not be kinked or crushed. Keep the connection cable away from hot surfaces and sharp edges.
- The product must not be electrically connected to other fairy lights or anything similar.
- The On/Off switch on the remote control and the switch on the mains adapter do not disconnect the product from the mains. The power supply can only be cut off by unplugging the mains adapter. The power socket used must be easily accessible so that you can quickly unplug the mains adapter whenever necessary.
- Do not use the product if the product itself, the connection cable or the mains adapter show any visible signs of damage. Damage to the connection cable cannot be repaired. In the event of such damage, contact our customer care service and dispose of the product in accordance with the current regulations.
- Do not make any modifications to the product. Have repairs to the product carried out only by a specialist workshop or as arranged by our customer care service.
- Route the connection cable in such a way that it is not a tripping hazard. The cable is not suitable or certified for underground installation.
- Do not position the product in hollows or depressions where puddles might form.
- The LEDs are firmly built in and cannot and must not be replaced.
- Do not use any caustic, aggressive or abrasive products for cleaning.
- The product is suitable for outdoor use from a minimum temperature of approx. -10 °C. In temperatures colder than this, keep the product indoors, as otherwise it may become damaged.
- The product is not designed to withstand strong winds, storms, etc.! Take down the product in good time if strong winds or storms are forecast.
- Do not switch the product on while it is still in its packaging and do not cover it when it is in use.
- If the battery has leaked, avoid contact with skin, eyes and mucous membranes. If necessary, rinse the affected areas with water and consult a doctor immediately.
- Single-use batteries must not be charged, taken apart, thrown into fire or short-circuited.
- Protect batteries from excessive heat (radiators, direct sunlight). Remove the battery from the remote control when it is flat or if you do not intend to use the product for a longer period of time. This will prevent damage caused by leakage.
- If necessary, clean the battery and device contacts before inserting the batteries. Risk of overheating!


Use

Connecting the mains adapter

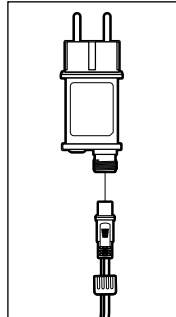

1. Insert the plug on the connection cable into the port on the mains adapter and screw on the protective cap firmly.
2. Insert the mains adapter into a power socket.

 
Activating the remote control

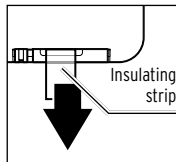

- Remove the insulating strip from the battery compartment of the remote control.

Switching on/off and light effects

 - The LEDs on the Christmas tree can only be switched on and off with the remote control.
- The remote control has a range of 5 m and must be positioned at an angle of 110° from the infrared receiver on the mains adapter for its signals to be received.
- Point the remote control at the mains adapter in the power socket (not at the Christmas tree!). Ensure there are no objects blocking the space between the remote control and the mains adapter.
- Avoid bright light, such as direct sunlight and bright neon light. This can interfere with the transmission of infrared rays.

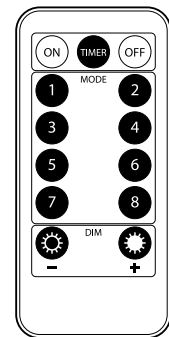


- Press the ...
- ... **ON button** to switch the LEDs on.
 - ... **1 button**. All light effects will be shown one after the other. There are six different light effects, some with glowing LEDs, others with flashing LEDs.
 - ... **buttons 2 to 7** to select one of the six light effects.
 - ... **8 button** to have the LEDs light up continuously (with no light effects).
 - ... **OFF button** to switch the LEDs off.
 - To increase the brightness of the LEDs, press the **+ button**.
 - To dim the LEDs, press the **- button**.

- To have the LEDs switch on via the timer, press the **TIMER** button on the remote control. The LEDs are turned on and off as follows:
On: 6 hours -> Off: 18 hours -> On: 6 hours, and so on.
- You can also switch the LEDs on in timer mode on the mains adapter. To do this, proceed as follows: Press and hold the switch on the mains adapter for approx. 2 seconds until the LEDs flash twice and then light up continuously. Now press the switch again, if necessary, press multiple times to select one of the six light effects. To turn the timer mode off again, press and hold the switch on the mains adapter for approx. 2 seconds until the LEDs flash twice or press the **TIMER** button on the remote control.

Replacing the battery in the remote control

 The battery must be replaced when the LEDs stop responding to the remote control. You need a battery of type CR2025, 3 V. The battery compartment is located on the back side of the remote control.

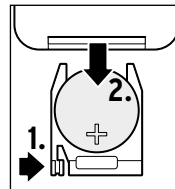

1. Push the locking mechanism in the direction of the arrow and pull out the battery holder.
2. Replace the flat battery with a new one. When doing so, make sure that the polarity is correct (+ symbol facing upwards).

Touching the battery with bare hands may cause contamination on the contacts, and this may have an insulating effect. Therefore, use a dry, soft cloth to insert the battery.

3. Push the battery holder back in completely. You must hear and feel it click into place.

Technical specifications

Model:	718 614
Mains adapter	
Input:	220-240 V ~ 50/60 Hz
Output:	31 V 6 W
Protection class:	II
IP code:	IP44
LED tree	
Bulb:	50 LEDs
Protection class:	III
IP code:	IP44
Remote control	
Single-use battery:	1x CR2025/3 V Watt-hour rating: 0.42 Wh (tested as per UN 38.3)
Ambient temperature:	-10 to +40 °C
Made exclusively for:	Tchibo GmbH, Überseering 18, 22297 Hamburg, Germany

In the course of product improvement, we reserve the right to make technical and optical modifications to the product.

Disposal

The product, its packaging and the supplied battery have been manufactured from valuable materials that can be recycled. Recycling reduces the amount of refuse and preserves the environment. Dispose of the **packaging** at a recycling point that sorts materials by type. Make use of the local facilities provided for collecting paper, cardboard and lightweight packaging.



Devices, single-use batteries and rechargeable batteries marked with this symbol must not be disposed of along with household waste!

You are legally obliged to dispose of old devices separately from household waste. Electronic devices contain hazardous substances and, if stored or disposed of improperly, may cause harm to health and the environment. Information about collection points where old devices can be disposed of free of charge is available from your local authorities. Flat single-use and rechargeable batteries must be handed in at a local authority collection point or returned to a battery retailer. Tape off the contacts of lithium single-use/rechargeable batteries prior to disposal. Faulty bulbs must be disposed of in an environmentally-friendly way at a collection point for electrical waste.