


# Multi-tin lid

Product number: 714 915

Made exclusively for:  
Tchibo GmbH, Überseering 18,  
22297 Hamburg, Germany

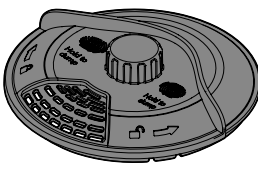

## Important information

- The multi-tin lid is suitable for standard tins with an outer diameter of 75.3 mm, 86.3 mm or 101.7 mm. The lid is not suitable for other containers.
- The multi-tin lid is used to cover food in tins temporarily. As the lid is not fully airtight, it is not suitable for keeping food fresh for longer periods. If you intend to keep the canned food for longer, transfer it to a suitable container and put it in the fridge. When open, the lid makes it easier to pour liquid from tins.
- The lid is resistant to temperatures of between +3 °C and +40 °C. It is suitable for use at room temperature and in the refrigerator. The lid is not suitable for use in the freezer, the oven or microwave.
- The lid does not seal when it closes. For this reason, always transport the tin upright. Always hold the tin itself, do not carry it by the lid.
- When pouring liquid, also hold the lid firmly in place with both hands.
- Clean the lid before the first use and after each subsequent use as described under "Cleaning". Do not use any caustic products or scouring sponges for cleaning. The lid is also dishwasher-safe. However, do not place the product directly over the heating elements.


## Securing the lid



There are 3 different rims on the underside of the lid, suitable for the different tin sizes.




- Place the lid straight onto the tin from above so that the edge of the lid grasps the edge of the tin evenly on all sides. You must hear and feel the lid click into place all round.

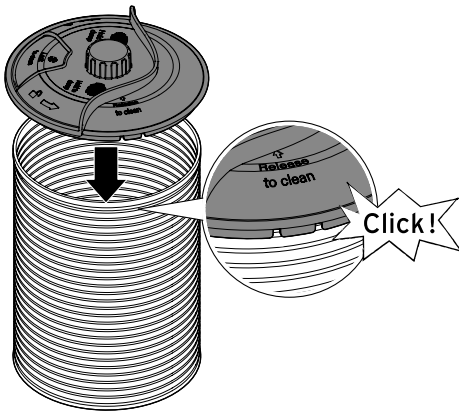


## Closing the lid: covering the contents

Rotatable dispenser disc

Viewing window

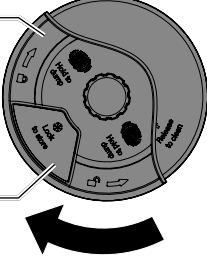


1. Turn the rotatable dispenser disc clockwise to the position shown. "Lock to store" appears in the viewing window.

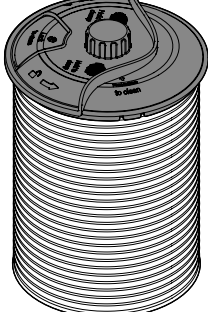


2. The contents of the tin are now covered and protected from foreign bodies, insects, etc.

## Opening the lid: pouring off the liquid

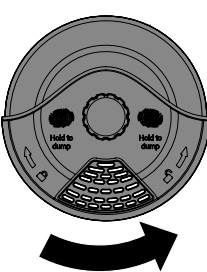

1. Turn the dispenser disc anti-clockwise to the position shown. The strainer appears.

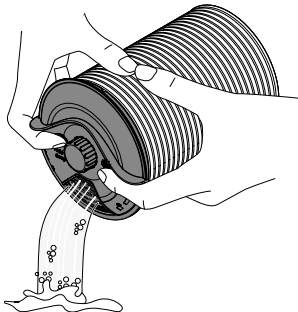


2. Hold the lid in place with both hands as shown when pouring the liquid. Solids are retained by the strainer.


## Cleaning

- Take the lid apart for thorough cleaning.

Raised handle

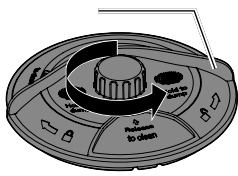


1. Press your thumb against the right-hand raised handle on the dispenser disc and turn it **anti-clockwise beyond the point of resistance** to the position shown. "Release to clean" appears.

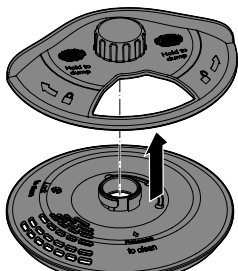

2. Pull the dispenser disc straight up and off.

3. Clean the lid and the dispenser disc with hot water and a little washing-up liquid. Do not use any caustic products or scouring sponges for cleaning. Both parts are also dishwasher-safe.

4. Allow the lid and dispenser disc to dry completely.

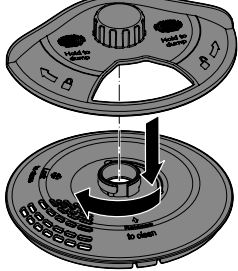

5. Replace the dispenser disc on the lid in such a way that "Release to clean" is visible, and turn the dispenser disc **clockwise past the point of resistance**.