

# Bread bin with chopping board

en Product information

Product number: 723 840


 Stick on the non-slip feet as shown.

## Bread bin

- Clean the bread bin with hot water and a mild washing-up liquid before using it for the first time and then at regular intervals.  
The bread bin is not dishwasher-safe.
- Do not use caustic or abrasive agents or hard brushes, etc. for cleaning.
- Some varnishes, synthetic substances and types of furniture polish may react adversely with the material of the non-slip feet and soften them.  
To avoid unwanted marks on furniture, place a non-slip mat underneath the product if necessary.
- Place the bread bin in a dry location and only use it to store bread or other baked goods.
- The bread bin is not suitable for heating in the oven, on the stove or in the microwave.

## Bamboo lid / chopping board

- **You must remove the bamboo lid from the bread bin in order to use it as a chopping board.** Do not chop food on the bamboo lid when it is placed on the bread bin.  
The bread bin can slip, posing a risk of injury!
- Clean the chopping board quickly by hand with a little warm water and, if necessary, a little mild washing-up liquid. The chopping board must not be left in the dishwater for an extended period of time or cleaned under running water. Leave it upright to dry thoroughly after cleaning. The chopping board is not dishwasher-safe.
- To ensure you can continue using the chopping board for a long time, we recommend rubbing the bamboo wood with oil at regular intervals. Proceed as follows:
  1. Clean the chopping board as described above and leave it upright to dry thoroughly after cleaning.
  2. Apply a few drops of cooking oil (not linseed oil!) to the bamboo wood with a brush or lint-free cloth. Wipe off any excess oil with a cloth.
  3. Allow the oil to absorb into the wood before using the chopping board again.  
If necessary, place a protective mat under the chopping board to avoid marks on the surface underneath.

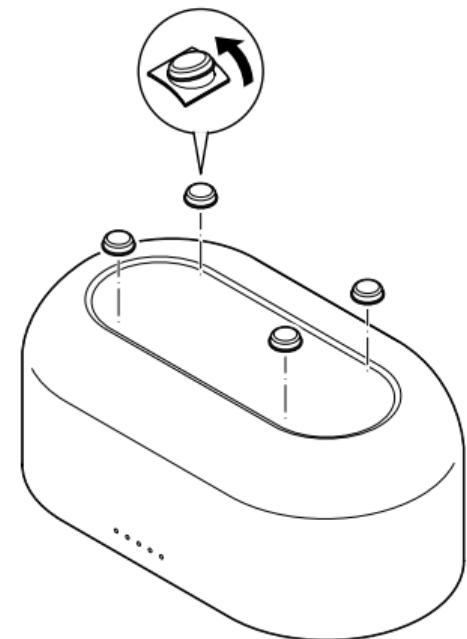

Made exclusively for:  
Tchibo GmbH, Überseering 18, 22297 Hamburg, Germany