



Kabelloser Bluetooth® Kopfhörer für Kinder

Bedienungsanleitung
Tchibo GmbH D-22290 Hamburg · 109901HB551XX · 2020-06

Sicherheitshinweise

Achtung: Lesen Sie aufmerksam die Sicherheitshinweise und benutzen Sie den Artikel nur wie in dieser Anleitung beschrieben, damit es nicht versehentlich zu Verletzungen oder Schäden kommt. Bewahren Sie diese Anleitung zum späteren Nachlesen auf. Bei Weitergabe des Artikels ist auch diese Anleitung mitzugeben.

Verwendungszweck

Der Kopfhörer dient zur Tonausgabe via **Bluetooth®** für mobile Wiedergabegeräte wie Smartphones, Tablet-PCs, Notebooks, MP3-Player, CD-Player etc. Der Kopfhörer ist für den privaten Gebrauch konzipiert und für gewerbliche Zwecke ungeeignet.

Verwenden Sie den Artikel nur unter moderaten klimatischen Bedingungen.

GEFAHR für Kinder

- ACHTUNG! Nicht für Kinder unter 36 Monaten geeignet. Micro-USB-Ladekabel und AUX-Kabel von Kindern fernhalten. Strangulationsgefahr.
- Kinder erkennen nicht die Gefahren, die bei unsachgemäßem Umgang mit Elektrogeräten entstehen können. Weisen Sie Kinder auf den richtigen Umgang mit dem Artikel hin.
- Halten Sie Kinder von Verpackungsmaterial fern. Es besteht u.a. Erstickungsgefahr!

GEFAHR von Verletzungen/Unfällen



- Der Kopfhörer darf nicht während der aktiven Teilnahme am Straßenverkehr benutzt werden, weil Sie damit sich bzw. Ihr Kind und andere Verkehrsteilnehmer gefährden.

GEFAHR durch Elektrizität

- Nehmen Sie keine Veränderungen am Artikel vor. Lassen Sie Reparaturen am Artikel nur von einer Fachwerkstatt durchführen. Durch unsachgemäße Reparaturen können erhebliche Gefahren für den Benutzer entstehen.
- Wenn Sie den Kopfhörer aufladen, beachten Sie:
 - Stellen Sie keine mit Flüssigkeit gefüllten Gefäße, wie z.B. Blumenvasen, auf oder in die nähere Umgebung des Kopfhörers. Das Gefäß kann umkippen und die Flüssigkeit kann die elektrische Sicherheit beeinträchtigen. Es besteht die Gefahr eines elektrischen Schlages.
 - Verwenden Sie nur geeignete Ladegeräte zum Aufladen.
 - Verwenden Sie keine defekten Ladegeräte und versuchen Sie nicht, diese zu reparieren.

WARNUNG vor Gehörschäden

- Hohe Lautstärke bei der Verwendung des Kopfhörers kann zum Verlust des Hörsinns führen. Bevor Ihr Kind den Kopf-

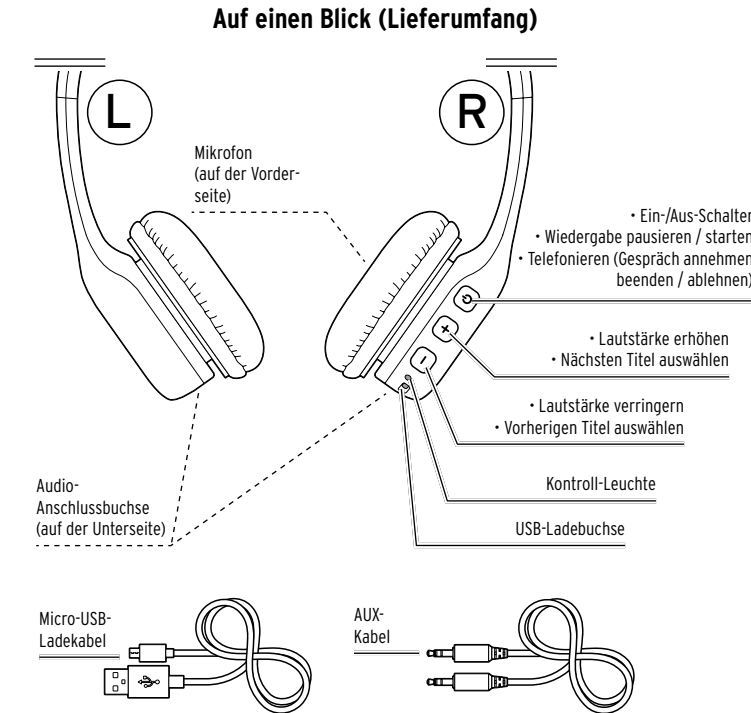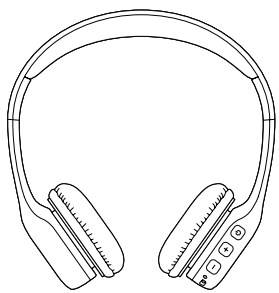


Weiterer Lieferumfang (ohne Abbildung):
• Klebe-Sticker-Set zum Aufkleben auf dem Kopfhörer

Akku laden

Um Schäden am im Kopfhörer eingebauten Akku zu vermeiden, ist dieser bei Lieferung nur halb aufgeladen. Laden Sie den Akku vor dem ersten Gebrauch vollständig auf.

Laden Sie den Akku des Kopfhörers über einen Netzadapter (nicht im Lieferumfang enthalten) am Stromnetz auf.

1. Vergewissern Sie sich, dass der Kopfhörer ausgeschaltet ist (siehe Kapitel „Gebrauch“).

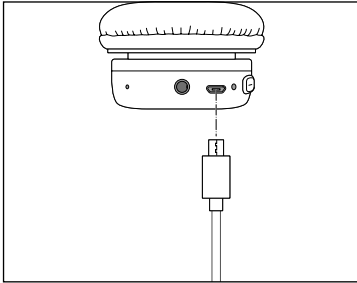

2. Schließen Sie das eine Ende des Micro-USB-Ladekabels an die USB-Ladebuchse am rechten Kopfhörer und das andere Ende an einen USB-Netzadapter an.

Die Kontroll-Leuchte leuchtet rot.

Ein normaler Ladevorgang dauert bei leerem Akku ca. 2 Stunden. Sobald der Akku vollständig geladen ist, erlischt die Kontroll-Leuchte.

Akku-Hinweise

Je nach Umgebungsbedingungen, Lautstärke etc. beträgt ...

- ... die Spielzeit ca. 10 Stunden (bei maximaler Lautstärke).
- ... die Spielzeit ca. 12 Stunden (bei 60% Lautstärke).
- ... die Sprechzeit (beim Telefonieren) ca. 10 Stunden.

Auf einen Blick (Lieferumfang)

Kopfhörer per Bluetooth® verbinden

1. Halten Sie die Taste für ca. 3 Sekunden gedrückt.
2. Aktivieren Sie die **Bluetooth®**-Funktion an Ihrem mobilen Gerät (z.B. Smartphone) und starten Sie die Gerätesuche.
3. Wählen Sie **TCM600373** aus der Liste und bestätigen Sie ggf.

Sobald die Verbindung erfolgreich hergestellt ist, ertönen aus dem Kopfhörer 2 kurze Signaltöne. Die Kontroll-Leuchte blinkt kontinuierlich in langsamen Abständen blau.

Beachten Sie:

Wenn Sie den Kopfhörer zwischendurch ausschalten, verbindet er sich nach dem erneuten Einschalten automatisch wieder mit dem zuvor verbundenen Gerät - sofern dieses in der Nähe und eingeschaltet sowie **Bluetooth®** aktiviert ist.

Reset

Elektromagnetische Strahlungen im Umfeld des Gerätes können zu Funktionsstörungen führen. Wenn der Kopfhörer sich nicht verbindet, führen Sie einen Reset durch:

1. Entfernen Sie sich mit dem Kopfhörer aus dem Bereich der elektromagnetischen Strahlungen.
2. Schalten Sie den Kopfhörer aus und wieder ein.

Gebrauch

Ein- und Ausschalten

▷ Einschalten:

Halten Sie die Taste für ca. 3 Sekunden gedrückt.

Zuerst ertönt eine kurze Tonfolge und dann zwei kurze Signaltöne. Die Kontroll-Leuchte blinkt schnell blau. Wenn sich der Kopfhörer außerdem noch mit einem mobilen Gerät (z.B. Smartphone) verbunden hat, ertönen zwei weitere kurze Signaltöne und die Kontroll-Leuchte blinkt kontinuierlich in langsamen Abständen blau.

▷ Ausschalten:

Halten Sie die Taste für ca. 3 Sekunden gedrückt, bis Sie eine kurze Tonfolge hören und die Kontroll-Leuchte erlischt.

Musik abspielen

Der Kopfhörer kann Musik in allen gängigen Datei-Formaten wiedergeben, die das jeweilige Wiedergabegerät unterstützt. Der Kopfhörer unterstützt auch den Übertragungsstandard A2DP. Dieser Standard, der von den meisten gängigen Smartphones unterstützt wird, wurde speziell dafür entwickelt, Stereo-Audio-Signale drahtlos via **Bluetooth®** zu übertragen.

Beachten Sie:

- Ggf. müssen Sie die Übertragungsart über A2DP manuell an Ihrem Smartphone aktivieren. Lesen Sie dazu die Bedienungsanleitung Ihres mobilen Gerätes.

- Je nach mobilem Gerät kann es sein, dass das erste Starten der Wiedergabe vom Kopfhörer aus nicht funktioniert. Starten Sie die Wiedergabe in diesem Fall einmalig manuell am mobilen Gerät.

Wiedergabe starten / stoppen

▷ Wiedergabe starten:

Drücken Sie 1x kurz die Taste .

▷ Wiedergabe unterbrechen:

Drücken Sie 1x kurz die Taste während der Wiedergabe.

▷ Wiedergabe fortsetzen:

Drücken Sie 1x kurz die Taste .

Titel auswählen

▷ Nächster Titel:

Drücken Sie lange die Taste , um zum nächsten Titel zu springen.

▷ Titelanfang:

Drücken Sie lange die Taste , um zum Titelanfang zu springen.

▷ Vorheriger Titel:

Drücken Sie lange die Taste , um zum Titelanfang zu springen. Drücken Sie anschließend erneut lange die Taste , um zum vorherigen Titel zu springen.

Lautstärke regeln

▷ Lautstärke erhöhen:

Drücken Sie die Taste mehrmals kurz.

Wenn die maximale Lautstärke erreicht ist, ertönt ein Signalton.

▷ Lautstärke verringern:

Drücken Sie die Taste mehrmals kurz.

Wenn die geringste Lautstärke erreicht ist, ertönt ein Signalton.

Telefonieren

Sie können über das im Kopfhörer integrierte Mikrofon direkt telefonieren. Dabei ist es in der Regel nicht erforderlich, das Mikrofon vor den Mund zu halten.

Ein Gespräch annehmen

Sobald ein Gespräch eingeht, hören Sie fortlaufend einen Klingelton und die Audio-wiedergabe wird unterbrochen.

Nehmen Sie ein eingehendes Gespräch an, indem Sie ...

... 1x kurz die Taste drücken.

Das Gespräch wird über den Kopfhörer übertragen. Sie können über das integrierte Mikrofon frei sprechen.

... das Gespräch wie gewohnt am Smartphone annehmen.

Sie können an Ihrem Smartphone auswählen, ob Sie das Gespräch auf den Kopfhörer übertragen oder private Gespräche lieber direkt am Smartphone führen wollen.

Gespräch beenden

Beenden Sie ein Gespräch, indem Sie ...

... 1x kurz die Taste drücken oder

... das Gespräch wie gewohnt am Smartphone beenden.

Je nach Smartphone wird die Audiowiedergabe automatisch fortgesetzt oder Sie müssen sie wie beschrieben neu starten.


Gespräch ablehnen

Halten Sie die Taste gedrückt, um ein eingehendes Gespräch abzulehnen.

Diese Funktion wird nicht von jedem Smartphone unterstützt. Sehen Sie in der Anleitung Ihres Smartphones nach.

Kopfhörer an Audio-Geräte (ohne Bluetooth®) anschließen

Mobile Wiedergabegeräte ohne **Bluetooth®**-Funktion können Sie mit dem beiliegenden AUX-Kabel direkt an den Kopfhörer anschließen.

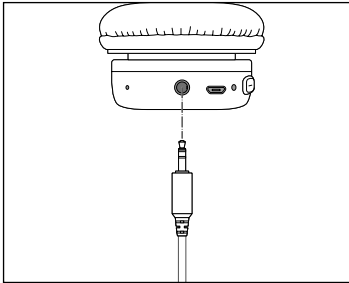


1. Verbinden Sie den Kopfhörer-Ausgang des Wiedergabegerätes über das beiliegende AUX-Kabel mit der Audio-Anschlussbuchse am Kopfhörer.
2. Schalten Sie beide Geräte ein und verringern Sie die Lautstärke am Wiedergabegerät.
3. Starten bzw. stoppen Sie die Wiedergabe am Wiedergabegerät.
4. Regulieren Sie die Lautstärke am Wiedergabegerät.

Zwei Kopfhörer miteinander verbinden

Sie können zwei Kopfhörer miteinander verbinden, um gemeinsam Musik vom selben Audio-Gerät zu hören.

Sie benötigen einen zweiten Kopfhörer und ein zusätzliches AUX-Kabel.

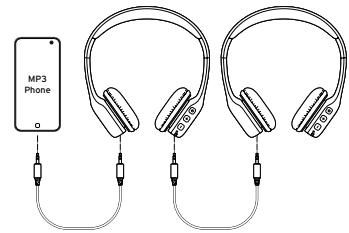

▷ Verbinden Sie zwei Kopfhörer wie oben abgebildet miteinander. Regulieren Sie die Lautstärke am Wiedergabegerät.

Störung / Abhilfe

Kein Ton

- Ist die Lautstärke zu leise eingestellt?
- Ist der Akku leer bzw. der Akkuladezustand niedrig? Laden Sie den Akku auf.

Häufige Tonunterbrechungen

- Ist die Entfernung zwischen mobilem Gerät und Kopfhörer zu groß?

Keine Bluetooth®-Verbindung

- Unterstützt Ihr mobiles Gerät **Bluetooth®**? Lesen Sie die Bedienungsanleitung Ihres mobilen Gerätes.
- Ist **Bluetooth®** im mobilen Gerät deaktiviert? Kontrollieren Sie die Einstellungen. Aktivieren Sie ggf. **Bluetooth®**. Kontrollieren Sie, ob der Kopfhörer in der Liste der gefundenen Geräte auftaucht. Wenn nicht, verbinden Sie die Geräte erneut. Platzieren Sie beide Geräte dicht beieinander. Entfernen Sie andere Geräte mit Funkübertragung aus der Umgebung.
- Ist bei Ihrem Wiedergabegerät ein Passwort erforderlich? Kontrollieren Sie die Einstellungen.

Technische Daten

Modell:	600 373
Lithium-Ion-Akku	3,7 V DC 300 mAh
Ladezeit:	ca. 2 Stunden
Spielzeit:	ca. 10-12 Stunden (je nach Lautstärke, Umgebungsbedingungen etc.)
Sprechzeit:	ca. 10 Stunden (je nach Lautstärke, Umgebungsbedingungen etc.)
Standby:	ca. 20 Stunden (je nach Umgebungsbedingungen etc.)
Bluetooth®	
Version:	V5 / niedrigere Versionen (ab 1.1) sind kompatibel, unterstützen aber ggf. nicht alle Funktionen
Reichweite:	max. 10 m (im freien Feld)
Frequenzbereich:	2,402 GHz bis 2,480 GHz
Max. Sendeleistung:	2,5 mW
Gerätestandards:	HFP V1.6 / HSP V1.2 / A2DP V1.2 / AVRCP V1.4
Umgebungstemperatur:	+10 bis +45 °C
Made exclusively for:	Tchibo GmbH, Überseering 18, 22297 Hamburg, Germany, www.tchibo.de

Im Zuge von Produktverbesserungen behalten wir uns technische und optische Veränderungen am Artikel vor.

Kompatibel mit

Bluetooth® Smart-fähigem Smartphone oder Tablet

Android ab 4.3

- iOS-Phones (iOS 7.0 und höher); iOS-Tablets (iOS 7.0 und höher)
- Die **Bluetooth®** Wortmarke und Logos sind eingetragene Marken von Bluetooth SIG, Inc. Die Nutzung dieser Marken durch die Tchibo GmbH erfolgt unter Lizenz.
- Android, Google Play und das Google Play-Logo sind Marken von Google Inc.
- The **Bluetooth®** word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Tchibo GmbH is under license.
- Android, Google Play and the Google Play logo are trademarks of Google Inc.

Konformitätserklärung

Hiermit erklärt die Tchibo GmbH, dass dieses Produkt zum Zeitpunkt des Inverkehrbringens die grundlegenden Anforderungen und die übrigen einschlägigen Bestimmungen der Richtlinie 2014/53/EU erfüllt. Die vollständige Konformitätserklärung finden Sie unter Eingabe der Artikelnummer (**600 373**) auf www.tchibo.de/anleitungen

Entsorgen

Der Artikel und seine Verpackung wurden aus wertvollen Materialien hergestellt, die wiederverwertet werden können. Dies verringert den Abfall und schonet die Umwelt.

Entsorgen Sie die **Verpackung** sortenrein. Nutzen Sie dafür die örtlichen Möglichkeiten zum Sammeln von Papier, Pappe und Leichtverpackungen.

Geräte, die mit diesem Symbol gekennzeichnet sind, dürfen nicht mit dem Hausmüll entsorgt werden!

Sie sind gesetzlich dazu verpflichtet, Altgeräte getrennt vom Hausmüll zu entsorgen. Informationen zu Sammelstellen, die Altgeräte kostenlos entgegennehmen, erhalten Sie bei Ihrer Gemeinde- oder Stadtverwaltung.

Wir sind Mitglied des Rücknahmesystems take-e-back. Weitere Informationen dazu finden Sie unter www.tchibo.de/entsorgung.

Batterien und Akkus gehören nicht in den Hausmüll! Sie sind gesetzlich dazu verpflichtet, leere Batterien und Akkus bei einer Sammelstelle Ihrer Gemeinde- oder Stadtverwaltung oder beim batterievertreibenden Fachhandel abzugeben.

Achtung! Dieses Gerät enthält einen Akku, der aus Sicherheitsgründen fest eingebaut ist und nicht entnommen werden kann, ohne das Gehäuse zu zerstören. Ein unsachgemäßer Ausbau stellt ein Sicherheitsrisiko dar. Geben Sie daher das Gerät ungeöffnet bei der Sammelstelle ab, die Gerät und Akku fachgerecht entsorgt.

Artikelnummer: 600 373

Wireless Bluetooth®
Headphones for Children

 Instructions for use
Tchibo GmbH D-22290 Hamburg · 109901HB551XX · 2020-06

Safety warnings

 Warning: Read the safety warnings carefully and only use the product as described in these instructions to avoid accidental injury or damage. Keep these instructions for future reference. If you give this product to another person, remember to also include these instructions.

Intended use

The headphones are designed for audio output via **Bluetooth®** for mobile playback devices such as smartphones, tablets, notebooks, MP3 players, CD players, etc. The headphones are designed for personal use and are not suitable for commercial purposes.

Use the product only in moderate climatic conditions.

DANGER to children

- CAUTION! Not suitable for children under the age of 36 months. Keep the micro-USB charging cable and the AUX cable out of the reach of children. Risk of strangulation.
- Children are not aware of the risks involved in handling electric devices incorrectly. Show children how to use the product correctly.
- Keep packaging materials out of the reach of children. There is a risk of suffocation!

DANGER – risk of injury/accidents

- The headphones must not be used while in traffic, as this would put you or your child and any other road users in danger.

DANGER due to electricity

- Do not make any modifications to the product. Only have repairs to the product carried out by a specialist workshop. Improper repairs may result in considerable risks to the user.
- When charging the headphones, please note the following:
 - Do not place any containers filled with liquids, such as vases, on or within close proximity of the headphones. They could topple over and the liquid could impair the electrical safety of the device. There is a risk of electric shock.
 - Use only suitable chargers for charging the product.
 - Do not use any faulty chargers and do not attempt to repair them.

WARNING - risk of hearing damage

-  Listening to the headphones at high volume may damage or lead to loss of hearing. Set the volume to low before your child puts on the headphones! Hearing can become damaged if exposed to high volumes suddenly or for long periods of time.




WARNING – risk of burns/fire

- You cannot and must not attempt to replace the built-in rechargeable battery yourself. There is a risk of explosion if the battery is replaced incorrectly. It should be replaced only with identical batteries or ones of equivalent value. If the rechargeable battery is defective, contact a specialist workshop.
- Do not place any naked flames such as burning candles near the headphones. The product must be kept away from candles and other naked flames at all times to prevent the spread of fire.
- The product contains a lithium-ion rechargeable battery. It must not be taken apart, thrown into fire or short-circuited.
- Do not alter and/or deform/heat/disassemble rechargeable/single-use batteries.

CAUTION – material damage

- Avoid storing, charging and using at extreme temperatures and extremely low air pressure (e.g. at high altitudes).
- Do not drop the headphones and do not expose them to heavy vibrations.
- Do not immerse the headphones or connection cable in water or any other liquids.
- Never open or remove any part of the headphone casing. Do not insert any objects into the openings in the casing.
- Do not connect the headphones to the speaker output of a separate amplifier, as this may damage the product.
- Set the connected sound source no louder than room volume before switching the headphones on to prevent overload damage to the headphones.
- Protect the headphones from dust, moisture and intense heat, such as direct sunlight or heaters.
- Avoid direct contact with any magnetised ID cards, phone cards, credit cards, etc. as well as audio tapes, watches, etc. They could become damaged by the built-in magnets in the headphones.
- Do not use any caustic, aggressive or abrasive products for cleaning.

At a glance (features)

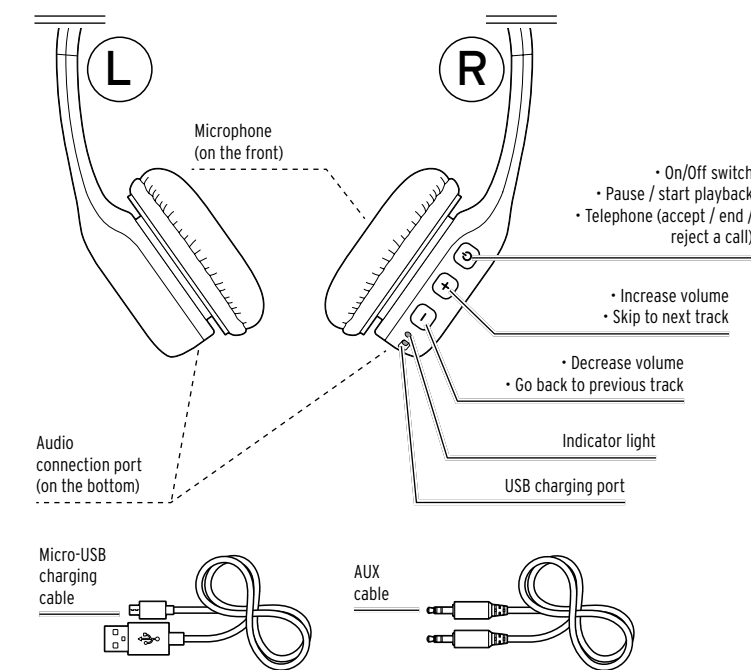


Also included (not illustrated here):

- Set of stickers for decorating the headphones

Charging the battery

To avoid damage to the rechargeable battery built into the headphones, it is only half-charged upon delivery. Charge the battery fully before using the headphones for the first time. Charge the battery in the headphones by connecting a mains adapter (not included) to the power supply.

1. Ensure that the headphones are switched off (see section titled “Use”).

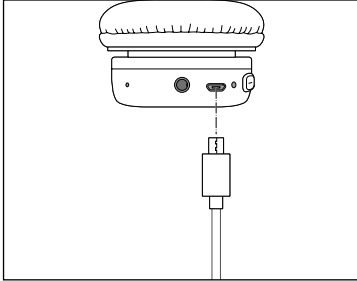

2. Plug one end of the micro-USB charging cable into the USB charging port on the right-hand headphone and the other end into a USB mains adapter.

The indicator light turns red.

The usual charging time for a flat battery is approx. 2 hours. Once the rechargeable battery is fully charged, the indicator light will go out.

Information on the rechargeable battery

Depending on surrounding conditions, volume, etc., the battery will last...

- ... approx. 10 hours when playing music (at maximum volume).
- ... approx. 12 hours when playing music (at 60% volume).
- ... approx. 10 hours when used for calls.

To preserve the rechargeable battery's full capacity for as long as possible, you should fully recharge the battery every 2 to 3 months, even if you do not use the headphones.

Charge the battery in an environment between +10 and +40 °C.

The battery will best hold its charge at room temperature. The lower the ambient temperature, the shorter the playback time.

The battery needs to be charged when three beeps sound at regular intervals. If the battery is not charged, the headphones will switch off automatically after approx. 15-20 minutes.

Automatic switch-off feature

In order to avoid any unnecessary power usage, the headphones come with an automatic switch-off feature, which automatically switches the device off after approx. 10 minutes without a signal.

Establishing a Bluetooth® connection

Please note:

- Some devices require longer to establish a connection; this is not a fault.
- Always refer to the instruction manual for your mobile device.
- It is usually only possible to connect one device to the headphones at a time.

Connecting the headphones via Bluetooth®

1. Press and hold the  button for approx. 3 seconds.
2. Activate **Bluetooth®** on your mobile device (e.g. smartphone) and start the device search.
3. Select **TCM600373** from the list and confirm if necessary.

You will first hear a brief melody and then two short beeps. The indicator light flashes blue for approx. 10 seconds and then flashes quickly, alternating between red and blue.

Once the connection has been established successfully, the headphones will beep twice. The indicator light will flash blue in continuous, slow intervals.

Please note:

If you switch the headphones off, they will connect automatically to the last connected device when switched back on, provided this device is in the vicinity, switched on and **Bluetooth®** is activated.

Reset

Electromagnetic interference around the device could lead to malfunctions. If the headphones do not connect, carry out a reset:

1. Remove yourself and the headphones from the area with electromagnetic interference.
2. Switch the headphones off and back on again.

Use

Switching on and off

- ▷ **Switching on:**

Press and hold the  button for approx. 3 seconds.

You will hear a brief melody followed by two short beeps. The indicator light will flash blue quickly. If the headphones have also connected to a mobile device (e.g. smartphone), they will beep briefly twice more and the indicator light will flash blue in continuous, slow intervals.

- ▷ **Switching off:**

Press and hold the  button for approx. 3 seconds until you hear a brief melody and the indicator light disappears.

Playing music

The headphones can play back music in all standard file formats supported by the playback device.

The headphones also support the A2DP transmission standard. This standard is supported by most common smartphones and was specially developed for transmitting stereo audio signals wirelessly via **Bluetooth®**.

Please note:

- It may be necessary to manually activate the A2DP transmission mode on your smartphone. To do this, refer to the instruction manual for the mobile device.

- Depending on the mobile device, starting playback for the first time on the headphones may not work. In this case, start playback manually once on the mobile device.

Starting / stopping playback

- ▷ **Starting playback:**

Press the  button once briefly.

- ▷ **Pausing playback:**

Press the  button once briefly during playback.

- ▷ **Resuming playback:**

Press the  button once briefly.

Choosing a track

- ▷ **Next track:**

Press and hold the  button to skip to the next track.

- ▷ **Start of track:**

Press and hold the  button to go back to the start of the track.

- ▷ **Previous track:**

Press and hold the  button to go back to the start of the track. Then press and hold the  button again to go back to the previous track.

Adjusting the volume

- ▷ **Increasing the volume:**

Press the  button briefly several times.

You will hear a beep once the maximum volume has been reached.

- ▷ **Decreasing the volume:**

Press the  button briefly several times.

You will hear a beep once the lowest volume has been reached.

Making and receiving phone calls

You can make phone calls directly through the microphone built into the headphones. It is usually not necessary to hold the microphone in front of your mouth when doing so.

Receiving calls

When you receive a call, you will hear a continuous ringing and the audio playback will be paused.

To accept an incoming call, ...

- ... press the  button once briefly. The call will be transmitted through the headphones. You can speak freely via the integrated microphone.
- ... simply take the call on your smartphone as usual.

On your smartphone you can select whether you would prefer to have the call transmitted through the headphones or directly to your smartphone.

Ending a call

To end a call, ...

- ... press the  button once briefly, or
- ... simply end the call on your smartphone as usual.

Depending on the smartphone, music playback may resume automatically or you may have to restart it as described.


Declining a call

Press and hold the  button to reject an incoming call.

-  This function is not supported by all smartphones. Refer to the instruction manual for your smartphone.

Connecting the headphones to audio devices (without Bluetooth®)

Mobile playback devices without **Bluetooth®** can be connected to the headphones directly using the AUX cable provided.

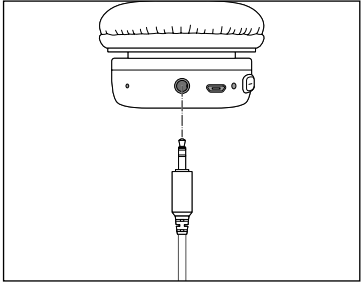

1. Connect the headphone output of the playback device to the audio connection port on the headphones using the AUX cable provided.
2. Switch the two devices on and lower the volume on the playback device.
3. Start or stop playback on the playback device.
4. Control the volume on the playback device.

Connecting two pairs of headphones to one another

You can connect two pairs of headphones to one another to listen to music from the same audio device at the same time.

You will need a second pair of headphones and an additional AUX cable.



- ▷ Connect two pairs of headphones to one another as illustrated above. Control the volume on the playback device.

Problems / solutions

No sound.

- Is the volume set too low?
- Is the battery flat or is the charge too low? Charge the battery.

The sound is often interrupted.

- Is there too much distance between the headphones and mobile device?

No Bluetooth® connection.

- Does your mobile device support **Bluetooth®**? Refer to the instruction manual for the mobile device.
- Is **Bluetooth®** deactivated on your mobile device? Check the settings. Activate **Bluetooth®** if necessary. Check whether the headphones appear in the list of detected devices. If not, connect the devices again. Place the devices close together. Remove any other radio communication devices from the surrounding area.
- Do you require a password for your playback device? Check the settings.

Technical specifications

Model:	600 373
Lithium-ion rechargeable battery	3.7 V DC 300 mAh
Charging time:	approx. 2 hours
Playback time:	approx. 10-12 hours (depending on volume, surrounding conditions, etc.)
Talk time:	approx. 10 hours (depending on volume, surrounding conditions, etc.)
Standby:	approx. 20 hours (depending on volume, surrounding conditions, etc.)

Bluetooth®	
Version:	V5 / earlier versions (from 1.1) are compatible but may not support all features
Range:	max. 10 m (in open spaces)
Frequency range:	2.402 GHz to 2.480 GHz
Max. transmission power:	2.5 mW
Device standards:	HFP V1.6 / HSP V1.2 / A2DP V1.2 / AVRCP V1.4

Ambient temperature: +10 to +45 °C
Made exclusively for:
Tchibo GmbH, Überseering 18,
22297 Hamburg, Germany
In the course of product improvement, we reserve the right to make technical and optical modifications to the product.



Compatible with

Bluetooth® smart-enabled smartphone or tablet

Android with version 4.3 or higher

- iOS phones (iOS 7.0 and higher); iOS tablets (iOS 7.0 and higher)
- The **Bluetooth®** word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Tchibo GmbH is under license.
- Android, Google Play and the Google Play logo are trademarks of Google Inc.

Declaration of Conformity

Tchibo GmbH hereby declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU at the time of its being placed on the market. The complete Declaration of Conformity can be found by entering the product number (**600 373**) at www.tchibo.de/instructions.

Disposal

The product and its packaging have been manufactured from valuable materials that can be recycled. Recycling reduces the amount of refuse and helps to preserve the environment.

Dispose of the **packaging** at a recycling point that sorts materials by type. Make use of the local facilities provided for collecting paper, cardboard and lightweight packaging.

 **Devices** marked with this symbol must not be disposed of along with household waste! You are legally obliged to dispose of old devices separately from household waste. Information about collection points where old devices can be disposed of free of charge is available from your local authorities.

 **Single-use batteries and rechargeable batteries** must not be disposed of along with household waste! You are legally obliged to dispose of all flat batteries at a local authority collection point or to return them to a battery retailer.

Warning! This device contains a rechargeable battery that, for safety reasons, is firmly built into the device and cannot be removed without destroying the casing. Improper disassembly leads to safety hazards. Therefore, take the device intact to a collection point where the device and battery will be disposed of properly.

Product number: 600 373