


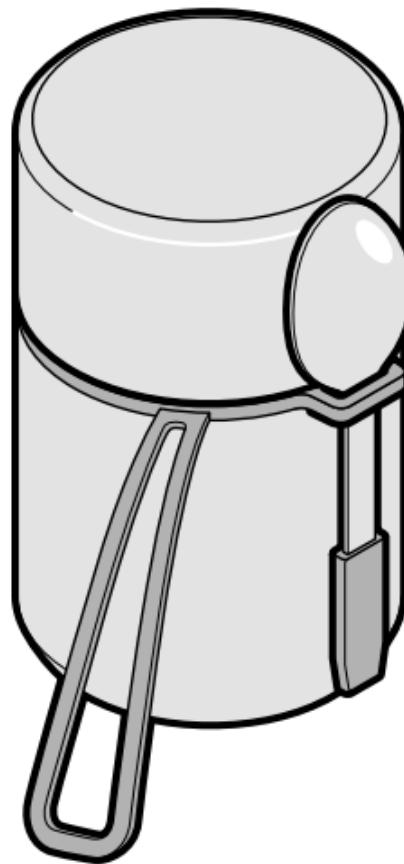

To-go-Thermobehälter

Travel thermal container




www.tchibo.de/anleitungen
www.tchibo.de/instructions

Artikelnummer | Product number : 704 569

(de) **Produktinformation**
(en) **Product information**



Deckel-Unterseite • Lid underside

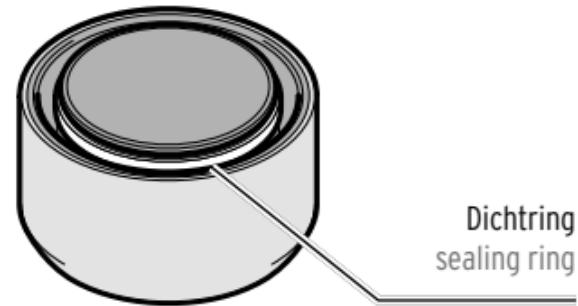

Ihr neuer To-go-Thermobehälter hält Ihre Speisen oder auch Heißgetränke länger warm (und z.B. Joghurt im Sommer länger kühl). Damit Sie lange Freude an dem Behälter haben, lesen Sie aufmerksam die folgenden Hinweise.

Sicherheit

- Halten Sie den Behälter von Kindern fern, um Verbrühungen zu vermeiden.
- Verbrüngungsgefahr durch Dampfdruck! Lassen Sie heiße Flüssigkeiten immer etwas abkühlen, bevor Sie den Behälter zuschrauben. Andernfalls kann sich zuviel Dampf ansammeln und den Deckel absprengen.
- Der Behälter hält Speisen länger heiß oder kalt! Seien Sie anfangs besonders vorsichtig, damit Sie sich nicht verbrühen. Fassen Sie den Behälter ggf. mit einem Topflappen o.Ä. an, um Ihre Hände vor übermäßiger Hitze bzw. Kälte zu schützen.
- ACHTUNG. Der Inhalt kann heiß sein!
- Wenn Sie den Behälter für Milchprodukte oder Babynahrung verwenden, halten Sie diese nicht zu lange warm, sondern brauchen Sie sie zügig auf, da sich sonst Bakterien unkontrolliert vermehren können.
- Der Deckel schließt auslaufsicher. Transportieren Sie den Behälter dennoch immer aufrecht stehend. Kontrollieren Sie vor dem Transport den korrekten Sitz des Dichtrings im Deckel sowie den korrekten Sitz des Deckels.
- Der Behälter ist nicht zur Erwärmung von Lebensmitteln geeignet. Nicht zur Verwendung in der Mikrowelle, im Backofen oder auf dem Herd geeignet.
- Sie können den Behälter zur Aufbewahrung von Lebensmitteln im Kühlschrank benutzen - jedoch nicht zum Einfrieren von Speisen.
- Füllen Sie den Behälter nicht randvoll, damit beim Öffnen nichts ausschwappt.
- Füllen Sie keine kohlensäurehaltigen Getränke ein.
- Das Mini-Gabel-Ende am Löffel hat spitze Zinken. Setzen Sie bei Nichtgebrauch immer die Schutzkappe darauf (siehe Heft-Rückseite).

Reinigen

- Spülen Sie vor dem ersten und nach jedem Gebrauch Behälter, Löffel und Deckel mit warmem Wasser und Geschirrspülmittel. Trocknen Sie alle Teile anschließend gut ab. Alle Teile sind spülmaschinengeeignet.
- Entfernen Sie zum gründlichen Reinigen die Schutzkappe vom Mini-Gabel-Ende des Löffels und ggf. den Dichtring aus dem Deckel (siehe Heft-Rückseite). Achten Sie beim Wiedereinsetzen des Dichtrings in den Deckel darauf, dass die umlaufende offene Seite zu Ihnen zeigt.
- Bewahren Sie den leeren Behälter mit abgenommenem Deckel auf, um Schimmelbildung zu vermeiden. Entfernen Sie ggf. auch den Dichtring aus dem Deckel, um sicherzustellen, dass sich darunter keine Speisereste mehr befinden.

Your new travel thermal container keeps your food or hot drinks warm for longer. In summer, it also keeps food such as yoghurt cool. To ensure many years of enjoyment from your new container, please read the following information carefully.

Safety

- Keep the container out of the reach of children to prevent scalds.
- There is a risk of scalding due to a release of hot steam! Always allow hot drinks to cool slightly before screwing the container closed. Otherwise, excessive steam may form inside and the lid could shoot off.
- The container keeps food hot or cold for a long time! Be especially careful when first opening the container to ensure you do not scald yourself. If necessary, hold the container using oven gloves or similar protection to protect your hands from intense heat or cold.
- CAUTION. The contents may be hot!
- **If using the container for dairy products or baby food**, do not keep them warm for too long, but instead consume them quickly in order to prevent bacteria from multiplying uncontrollably.
- The lid is completely leakproof when closed. Nevertheless, make sure the container is always standing upright when transporting it. Before transporting the container, check that the sealing ring on the lid is correctly in place and that the lid is correctly positioned.
- The container is not suitable for heating up food. Not suitable for use in the microwave, in the oven or on the hob.
- You can use the container to store food in the fridge - however, do not use it to freeze food.
- Do not fill the container up to the top otherwise its contents may spill out when it is opened.
- Do not fill the container with any carbonated drinks.
- The mini fork end on the spoon has pointed prongs. Always put the protective cap on it when not in use (see back of booklet).

Cleaning

- Wash the container, spoon and lid before using them for the first time and after every subsequent use with warm water and washing-up liquid. Then dry all parts thoroughly. All parts are dishwasher-safe.
- For a thorough clean, remove the protective cap from the mini fork end of the spoon and the sealing ring from the lid if necessary (see back of booklet). When reinserting the sealing ring, ensure that the side with the groove is facing you.
- Store the empty container with the lid removed to prevent mould from forming. If necessary, remove the sealing ring from the lid to ensure that there are no food remains underneath.