


# Twinkly Demo Mode Instructions / Twinkly Demomodus Anleitungen

\* For Store Managers only / \* Nur für Filialleiter

1.

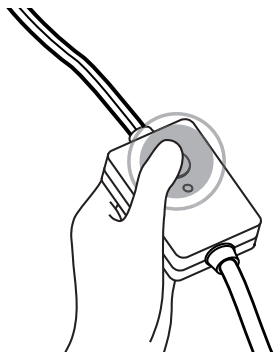

EN

1. To activate demo mode, press and hold the controller button for 15 seconds until the LED indicator turns YELLOW.


2.



2. In demo mode, the tree will rotate among 5 different effects. Each effect will play for 30 seconds in the following sequence:  
Rainbow → Snow → UpDown → Fireworks → Glow.  
Customers can try out the different light effects/colors via the Twinkly™ app.

**NOTE:** If the tree is idle for 15 seconds, or if the power is turned off and turned on again, it will resume back to demo mode until it is deactivated.

3.

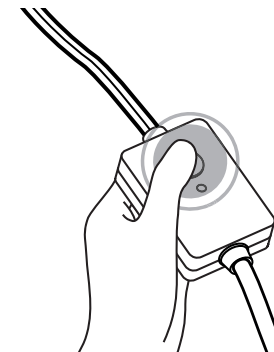

3. To deactivate demo mode, press and hold the controller button for 15 seconds until the LED indicator turns YELLOW.

DE

1. Um den Demomodus zu aktivieren, halten Sie die Steuerungstaste 15 Sekunden lang gedrückt, bis die LED-Anzeige GELB leuchtet.

2. Im Demomodus wechselt der Baum zwischen 5 verschiedenen Effekten. Jeder Effekt wird 30 Sekunden lang in der folgenden Reihenfolge abgespielt:  
Regenbogen → Schnee → AufwärtsAbwärts → Feuerwerk → Glühen.  
Über die Twinkly™ App können Kunden die verschiedenen Lichteffekte/Farben ausprobieren.

**HINWEIS:** Wenn der Baum 15 Sekunden lang im Leerlauf ist oder die Stromversorgung aus- und wieder eingeschaltet wird, kehrt er in den Demomodus zurück, bis er deaktiviert wird.

3. Um den Demomodus zu deaktivieren, halten Sie die Steuerungstaste 15 Sekunden lang gedrückt, bis die LED-Anzeige GELB leuchtet.