
Tchibo

(en) Instructions for use


LED Starlight Projector



1.

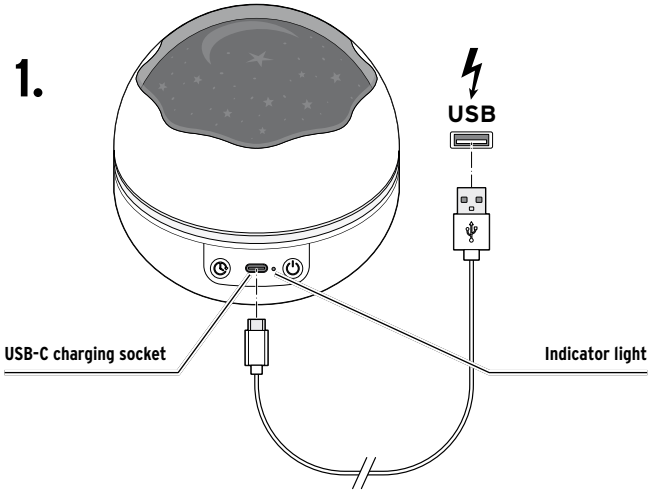

2.

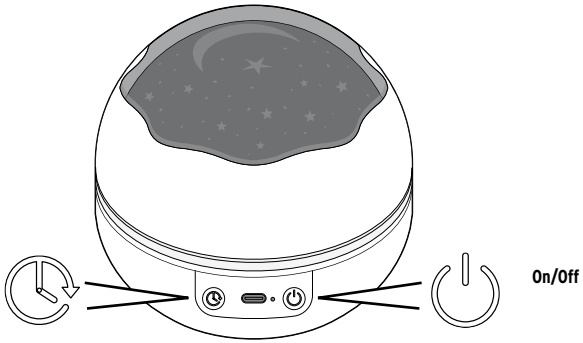

www.tchibo.de/instructions
(Please enter the product number in the box labelled "Bedienungsanleitungssuche" and click on "Suchen".)

Product number: 747 350

Made exclusively for:
Tchibo GmbH, Überseering 18, 22297 Hamburg, Germany

Dear Customer

Project a starry sky onto your ceiling at night and sleep soundly. The light switches off automatically after 2 hours.

We wish you a good night's sleep.

Your Tchibo Team

Safety warnings

Read the safety warnings carefully and only use the product as described in these instructions to avoid accidental injury or damage. Keep these instructions for future reference. If you give this product to another person, remember to also include these instructions.

Intended use

The product is designed for projecting light effects.
The product is only intended for decoration in private homes and is not suitable for lighting whole rooms. The product is designed for indoor use. It is designed for private use and is not suitable for commercial purposes.

Danger to children

- Keep packaging materials out of the reach of children. They pose several risks, including the risk of suffocation!

Risk of injury

- Danger of damage to eyes! LEDs are very bright. Do not look directly into the LED light.

Danger due to electricity

- Do not use the product if it shows visible signs of damage or if it has fallen down.
- Do not make any modifications to the product. Have repairs to the product carried out only by a specialist workshop. Improper repairs can result in considerable danger to the user.

When charging the product, please note the following:

- Use only suitable mains adapters. Do not use a faulty mains adapter and do not attempt to repair such faulty mains adapter.
- Only connect the device to a properly installed power socket with a mains voltage that complies with the technical specifications of the mains adapter. The device must not be connected to the mains in damp rooms.
- Disconnect the mains adapter from the power socket if malfunctions occur during use, after charging, during thunderstorms and before cleaning the device. Always pull on the mains adapter, not on the connection cable.

Warning – risk of burns/fire

- You cannot and must not attempt to replace or remove the built-in rechargeable battery yourself. There is a risk of explosion if the battery is replaced incorrectly. It should be replaced only with an identical battery or one of the same type. If the rechargeable battery is defective, contact a specialist workshop.
- The product contains a lithium rechargeable battery. This battery must not be taken apart, thrown into fire or short-circuited.
- Do not modify and/or deform/heat/dismantle rechargeable batteries. Do not allow damaged rechargeable batteries to come into contact with water.

Material damage

- Do not immerse the device in water or other liquids. Protect the device from high humidity, knocks, falls, dust, moisture, direct sunlight and extreme temperatures.
- The device must not be exposed to moisture. Only place it in dry, closed rooms.
- The integrated LED cannot and must not be replaced.
- Do not use any caustic, aggressive or abrasive products for cleaning.
- It cannot be fully ruled out that some varnishes, synthetic substances and types of furniture polish may react adversely with the non-slip material of the feet and soften them. To avoid unwanted marks on furniture, place a non-slip mat underneath the product if necessary.

Use

The rechargeable battery comes in a half-charged state. This is to prevent it from becoming damaged. Before first use, fully charge the battery by connecting a USB mains adapter (not included) to the power supply.

Charging the battery (Fig. 1)

1. Connect the USB-C charging socket to a suitable USB mains adapter using the enclosed charging cable.
2. Insert the USB mains adapter into a power socket. The indicator light will light up red.

The usual charging time for a flat battery is approx. 3.5 hours. Once the rechargeable battery is fully charged, the indicator light will turn green.

3. Unplug the mains adapter from the power socket and remove the charging cable from the USB-C connection socket.

With a fully charged battery, the operating time is approx. 30 hours.
The battery must be recharged when the light is only dimly lit.

Information on rechargeable batteries

- The device **cannot** be used while the battery is charging.
- To preserve the rechargeable battery's full capacity for as long as possible, you should fully recharge the battery every 3 months, even if you do not use the product.
- Charge the battery in an environment between +10 and +40 °C.
- The battery will best hold its charge at room temperature. The lower the ambient temperature, the shorter the operating time.

Switching on/off / timer (Fig. 2)

▷ To switch the product on or off permanently, press the On/Off switch ⏻.

▷ To switch on the timer, press the timer button 🕒 when the device is switched on.
The indicator light will light up white.
The light is automatically switched on and off in a rhythm of 2 hours ON – 22 hours OFF.

▷ To switch off the timer, press the timer button 🕒 again.
The indicator light goes out.

Increasing the projection angle (Fig. 3)

To illuminate a larger area with starlight, you can remove the white protective cover with the integrated acrylic glass aperture, but then handle the device with care so as not to damage the star foil. Do not look directly into the light.

▷ Pull the cover straight up and off.

Disposal

The product, its packaging and the built-in rechargeable battery have been manufactured from valuable materials that can be recycled. Recycling reduces the amount of refuse and preserves the environment. Dispose of the **packaging** at a recycling point that sorts materials by type. Make use of the local facilities provided for collecting paper, cardboard and lightweight packaging.


Devices, **single-use batteries and rechargeable batteries** marked with this symbol must not be disposed of along with household waste!
You are legally obliged to dispose of old devices separately from household waste. Electronic devices contain hazardous substances and, if stored or disposed of improperly, may cause harm to health and the environment. Information about collection points where old devices can be disposed of free of charge is available from your local authorities. Flat single-use and rechargeable batteries must be handed in at a local authority collection point or returned to a battery retailer.

Warning! This device contains a rechargeable battery that, for safety reasons, is firmly built into the device and cannot be removed without destroying the casing. Improper disassembly leads to safety hazards. For this reason, take the device intact to a collection point where the device and battery will be disposed of properly.

Technical specifications

Model:	747 350
Rechargeable battery:	1x lithium-ion battery, 1200 mAh/3.7 V Watt-hour rating: 4.44 Wh (tested as per UN 38.3)
Input:	DC 5 V/1 A
Protection class:	III
Charging time:	approx. 3.5 hours
Operating time:	approx. 30 hours
Timer:	ON: approx. 2 hours / OFF: approx. 22 hours
Bulb:	LED
Power:	max. 1 W
Ambient temperature:	+10 to +40 °C

3.

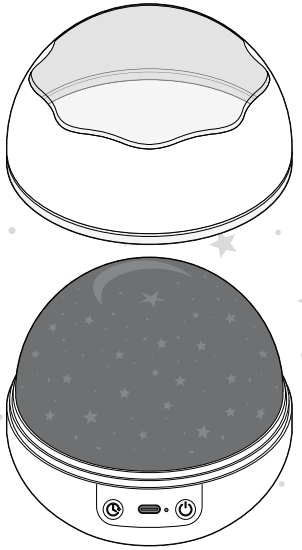

Tchibo GmbH D-22290 Hamburg · 161463AB5X6XVI · 2026-03