Real wax LED candles
with remote control

en **Instructions for use**

Information about the supplied batteries:
Manufacturer: CHANGZHOU JINTAN CHAOCHUANG BATTERY Co., Ltd., Xiyang Village, Maolu Town, Jintan, Jiang Su, PEOPLE'S REPUBLIC OF CHINA, www.chaochuang.com
Email: marvelous@chaochuang.com *Model*: CHAO CHUANG CR2025 3 V / CHAO CHUANG LR03 AAA 1.5 V
Manufacturing date: 2026/05 *Made in:* China



CE

Safety warnings

Read the safety warnings carefully and only use the product as described in these instructions to avoid accidental injury or damage. Keep these instructions for future reference. If you give this product to another person, remember to also include these instructions.

The product is only suitable for decoration and not for lighting whole rooms. The product is designed for indoor use. It is designed for private use and is not suitable for commercial purposes.


- Not a children's toy! Use only under adult supervision. Keep the product and packaging materials out of the reach of infants. They pose several risks, including the risk of suffocation!

The remote control contains a lithium battery (coin battery). There is a risk of leakage, gas emissions, explosion and fire:

- Swallowing batteries can be fatal. The remote control is fitted with a lithium coin battery. Swallowing the coin battery or one of the other batteries can cause severe internal chemical burns and even death within 2 hours. For this reason, keep both new and old batteries, the product and its remote control unit out of the reach of children. If one of the battery compartments does not close properly, discontinue use of the product and keep it out of the reach of children. If you think that a battery has been swallowed or has got into the body in any other way, seek medical advice immediately.
- Batteries may only be inserted or replaced by adults.
- Warning! Lithium batteries can explode if inserted incorrectly. It is therefore essential to ensure that the polarity (+/–) is correct when inserting the lithium coin battery and the other batteries. Use only batteries of the same or of equivalent type (see the technical specifications).
- Always replace all batteries in each LED candle at the same time. Do not mix old and new batteries, different types or brands of batteries, or batteries with different capacities.
- If necessary, clean the battery and device contacts before inserting the battery. Risk of overheating!
- Batteries must not be charged, taken apart or crushed, thrown into fire or short-circuited. Do not modify and/or deform/heat/dismantle batteries. Do not allow damaged batteries to come into contact with water.
- Batteries must not be overdischarged. Keep unused batteries in the original packaging. Do not allow unpacked batteries (either new or partially/fully used) to come into contact with each other in an unorganised manner. Also keep them away from metal objects.
- Protect the batteries/the product from excessive heat (radiators, direct sunlight). Remove the batteries from the product and its remote control unit when they are flat or if you do not intend to use the product for a longer period of time. This will help prevent damage caused by leakage.
- If a battery has leaked, avoid all contact with your skin, eyes and mucous membranes. Rinse the affected areas with plenty of clear water if necessary and consult a doctor immediately.
- **The outer surface of the LED candles is made of real wax.** Protect it from naked flames, heat and direct sunlight. Do not place any real candles directly next to the LED candles. **Do not light the wick!**
- Protect the product from dust, moisture and extreme temperatures.
- Do not switch the product on while it is still in the packaging.
- The LEDs are firmly built in and cannot and must not be replaced.
- Do not use any caustic, aggressive or abrasive products for cleaning.

Use

Inserting the batteries into the LED candles

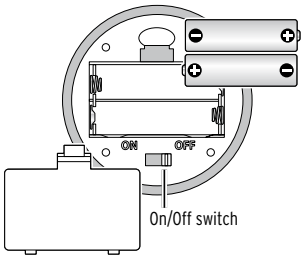

On/Off switch

1. Remove the battery compartment lid.
2. Insert the batteries as illustrated inside the battery compartment. Ensure that the polarity (+/–) is correct when doing so.
3. Put the battery compartment lid back on.

Switching on/off without the remote control

You can also use the LED candles independently of each other without the remote control. However, the timer function can only be controlled using the remote control.

▷ To switch the LED candle on continuously, slide the On/Off switch on the underside of the candle to **ON**.
In this position, the LED candle can be controlled using the remote control.

▷ To switch the LED candle off, slide the On/Off switch on the underside of the candle to **OFF**.
In this position, the LED candle cannot be controlled using the remote control.

Activating the remote control




Insulating strip

The remote control comes fitted with an insulating strip to protect the battery.

▷ To activate the remote control, pull the insulating strip out of the battery compartment.

Controlling the LED candles using the remote control



The On/Off switch on the underside of the respective candle must first be set to **ON**.

Tip: If you want to use the LED candles on an Advent wreath, for example, leave all candles that you do not yet want to respond to the remote control switched to **OFF** using the On/Off switch on the underside of the respective candles.
This allows you to activate the LED candles on your Advent wreath one by one.

The remote control has a range of approx. 5 m and will detect candles within a radius of approx. 50 cm.

▷ Point the remote control at the LED candles.
Ensure there are no objects blocking the space between the remote control and the candles.

Switching the LED candles on and off continuously

▷ To switch the LED candles on, press the **ON** button on the remote control.

▷ To switch the LED candles off, press the **OFF** button on the remote control.

To switch the LED candles from timer mode to continuous operation, you need to first switch them off using the **OFF** button, then back on using the **ON** button.

Switching the LED candles on in timer mode

▷ To switch the LED candles on in timer mode, press the **6H** button on the remote control once: The LED candles will flash once and then stay on for **6 hours**. They will then switch off automatically for **18 hours**, then back on again for 6 hours, and so on.

▷ To restart the timer cycle, press the **6H** button again. The LED candles will flash briefly once and then stay on for a full 6 hours before switching off for 18 hours, and so on.

▷ Press the **OFF** button on the remote control to deactivate timer mode and switch the LED candles off prematurely.


Bear in mind: To switch the LED candles off completely, slide the On/Off switch on the underside of the respective candles to **OFF**. To switch the candles back to timer mode, first press **ON** and then **6H**.

Replacing the battery in the remote control

If the LED candles no longer respond to the remote control, the battery must be replaced. The battery compartment is located on the back of the remote control.




1. Press the small lever in and pull out the battery holder.



2. Replace the flat battery with a new one (see "Technical specifications"). Ensure that the polarity (+/–) is correct when doing so (**+** symbol facing upwards).



Touching the battery with bare hands may cause contamination on the contacts, and this may have an insulating effect. Therefore, use a dry, soft cloth to insert the battery.

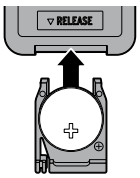

3. Push in the battery holder completely. You should hear and feel it click into place.

Technical specifications

Model:	761 239 (4x red), 764 757 (4x cream)
Remote control	
Single-use battery: (tested as per UN 38.3)	1x CR2025/3V (Li/MnO_2) Watt-hour rating: 0.45 Wh
Range:	5 metres
LED candles	
Single-use battery:	2x LR03 (AAA)/1.5V (Zn/MnO_2) each
Light source:	LED
Light duration (with 1 set of batteries):	approx. 230 hours
Ambient temperature:	+10 to +40 °C

In the course of product improvement, we reserve the right to make technical and visual modifications to the product.

Disposal

The product, its packaging and the batteries provided have been manufactured from valuable materials that can be recycled. Recycling reduces the amount of refuse and preserves the environment.

Dispose of the **packaging** at a recycling point that sorts materials by type. Make use of the local facilities provided for collecting paper, cardboard and lightweight packaging.

Devices, **single-use batteries** and **rechargeable batteries** marked with this symbol must not be disposed of along with household waste!

You are legally obliged to dispose of old devices separately from household waste. Electronic devices contain hazardous substances and, if stored or disposed of improperly, may cause harm to health and the environment. Information about collection points where old devices can be disposed of free of charge is available from your local authorities. Flat single-use and rechargeable batteries must be handed in at a local authority collection point or returned to a battery retailer. Tape off the contacts of lithium single-use/rechargeable batteries prior to disposal.

Product number:
761 239 (4x red) / 764 757 (4x cream)

Made exclusively for:
Tchibo GmbH, Überseering 18,
22297 Hamburg, Germany

www.tchibo.de/instructions