


Christmas train, Christmas tree

en **Instructions for use**


At a glance (contents)



Track sections x8

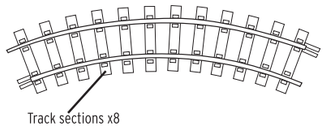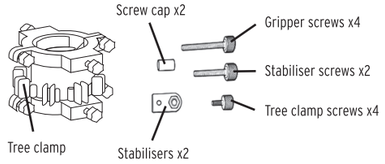

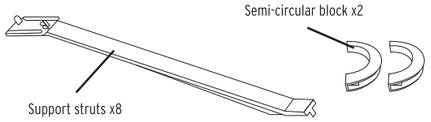


Locomotive Sledge with Santa's wagon Wagon

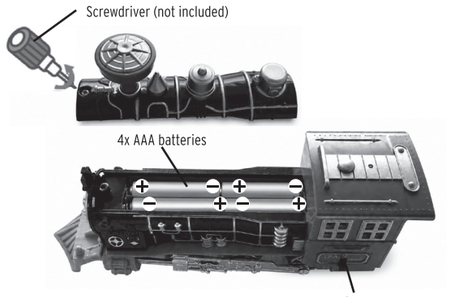

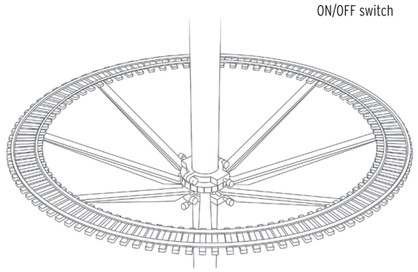

EG - DECLARATION OF CONFORMITY

The product described in this instruction manual complies with all relevant harmonized requirements of the EU. The complete declaration of conformity and instruction manual can be found online at www.jaxmotech.de/downloads.

Please keep this manual for future reference, as it contains important information. If you pass this item on to someone else, please include these instructions as well. Symbols used in these instructions:

⚠ This symbol warns you of a risk of injury.

⚠ This symbol warns you of the risk of injury from electricity.

Key terms in this guide:
DANGER Indicates an imminent risk of serious injury or death.
CAUTION Indicates a risk of minor injury.
NOTE Indicates possible damage to property.

ℹ Additional information is marked with this symbol.

Safety instructions ⚠

⚠ **Warning - Not suitable for children under 36 months. Small parts. Choking hazard**

General safety information
- This product is suitable for children aged 3 years and above.
- Assembly should only be carried out by adults.
- Adult supervision is recommended during play.
- Please read these instructions carefully and keep them for future reference.
- Remove all packaging materials and fastenings before handing the product to a child.
- Discontinue use immediately if any part is damaged, loose, or broken.

For use as toy (on floor)
When using the product as a toy on the floor:
- Use only on a flat, even surface.
- Keep hands, hair, and loose clothing away from moving parts.
- Do not use the toy on tables, shelves, stairs, or other elevated surfaces.
- Suitable for indoor use only.

DECORATIVE USE (ATTACHED TO TREE)

⚠ **Warning!**

When mounted on the tree, the product is no longer a toy.

- Installation must only be carried out by adults.
- When mounted on the tree or elevated structure, this product is for decorative purposes only. It must not be used for play.
- Install out of the reach of children under 3 years old.
- Ensure that the mounting surface is stable and reliable.
- Check before each use that all supports and clamps are securely fastened.
- Children must not climb, pull, hang on, or play with the mounted product.
- Suitable for indoor use only.

Battery warnings

⚠ **Warning!**

- Batteries may only be installed or replaced by adults.
- Only use batteries of the same or an equivalent type.
- Batteries must be inserted with the correct polarity.
- Do not mix old and new batteries.
- Do not mix different types of batteries (e.g. alkaline, standard/zinc carbon, rechargeable batteries).
- Do not recharge non-rechargeable batteries.
- Remove depleted batteries immediately.
- Remove the batteries if the product is not used for an extended period.
- The connections must not be short-circuited.
- Dispose of batteries in an environmentally friendly manner according to local regulations.
- Before disposing of the product, the batteries must be removed and disposed of separately according to local regulations. Used batteries must be removed from the product immediately.

Important safety instructions ⚠

Important!
- Two adults are recommended for safe assembly.
- Children must not play with individual parts or during assembly.

- Handle sharp edges and branches with care.
- Check all parts before use – do not use damaged parts.


Preparation
- Remove all parts from the packaging and compare with the parts list.
- Do not use missing or defective parts – contact customer service.
- **Estimated assembly time:** approximately 30 minutes
- **Required tools:** Phillips screwdriver (not included)

INSTALLATION ON TREE


Prepare the tree
- Stabilise the tree and ensure there is sufficient space around it.
- Install the Tree Train system **before any other decorations**.
- Protective clothing (goggles, long sleeves) is recommended.

1. Attach the tree clamp


1. Select area on the trunk: Choose a section on the tree where there is a diameter of approximately **90 cm** free of branches.

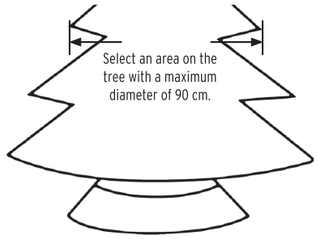


2. Open the tree clamp: Place the tree clamp around a 7-10 cm branch-free section of the trunk.

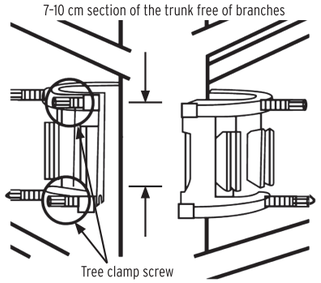

3. Insert stabilisers: Insert the stabilisers into the lower slots of the tree clamp. Attach the screw cap to the end of the stabiliser screw (see illustration below).

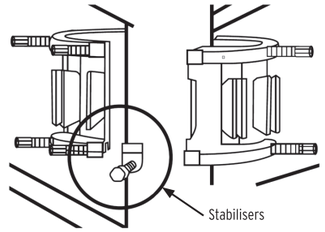

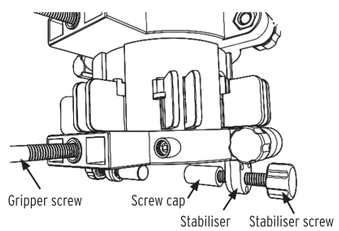

4. Secure the tree clamp: Tighten the screws alternately until the tree clamp **is stable, centred, and secure.**

5. Retighten grippers & stabilisers: Tighten the additional gripper and stabiliser screws.

Important: The clamp must be completely tight, horizontal, and centred.

2. Install support struts

1. Position the support struts at the marked location and press them into the groove of the clamp until they click into place.
2. Repeat the process for all **8 support struts**.
3. Attach the semicircular block to the tree clamp to secure the support struts.

3. Install tracks

1. Connect track sections to form a **closed circle**.
2. Guide the circular track down over the tree from above.
3. Place tracks on the platforms of the support struts.
4. Press to lock in place until the tracks are fully secured.

Important
- Ensure that **all train wheels are correctly seated on the track**.
- Before first use, **manually move the train forwards and backwards** to check it can move freely.

ALTERNATIVE USE ON THE FLOOR (TOY MODE)

This product can also be used independently of the tree as a **classic toy train on the floor**.

1. Prepare the surface
- Use only on smooth, level surfaces (parquet, laminate, tiles, short pile carpet).
- Keep the play area clear and remove obstacles.

2. Set up tracks for floor use
- Connect track sections to form a circle as usual.
- **The support struts and tree clamp are not required.**
- Press the tracks down gently to ensure they sit well.
- Ensure a level surface so that the train runs smoothly.

3. Insert & start the train
- Place the locomotive and carriages on the tracks, ensuring all wheels are correctly aligned.
- Manually move the train to check it moves freely on the tracks.

4. Safety while playing
- Do not set up in walkways → Risk of tripping.
- Do not use on elevated surfaces (tables, sofas).
- Children may only play with the product while supervised.
- Keep hair, clothing, or decorations away from moving parts.

BATTERY REPLACEMENT & ON/OFF SWITCH – FUNCTION MODES

Insert or replace batteries

The battery compartment is located on the top of the locomotive.
1. Remove the battery compartment cover.
   – Using a Phillips screwdriver, loosen the screw and remove the cover.
2. Insert four (4) x AAA 1.5 V batteries.
   – Pay attention to the correct polarity (+/–), as marked in the battery compartment.
3. Close the battery compartment again.
   – Replace the cover and tighten the screw.
4. Immediately remove and dispose of old or depleted batteries properly.

Attention: Batteries may only be inserted or replaced by adults. After inserting or replacing the batteries, the battery compartment must be completely closed and the screw firmly tightened before the toy is handed to a child. Do not use the toy if the battery compartment cannot be securely closed.

On/Off switch & function modes

The locomotive features a sliding switch on the side that controls the following operating modes:

- **OFF (Off)**
  The train is switched off.
- **ON (Movement + Music)**
  The train moves on the tracks with music and sound effects.
- **MUTE ON (Movement without music)**
  The train operates silently and all sound effects are disabled.



To start, simply move the switch to the desired position.

Care & maintenance
- Regularly remove dust and dirt from the train and tracks.
- Store the tracks in a dry location.
- Remove the train and batteries when not in use for an extended period.

TROUBLESHOOTING

1. Tracks in the tree are not level
– Readjust stabilisers
2. Train slips or jerks
– Check and clean wheels for dirt/grease.
– Position wheels correctly in the track.

Technical specifications

Model	: CTT 125
Product number	: 753 415
Batteries	: 4x LR03 (AAA) / 1.5 V ⎓
Ambient temperature	: +10 to +40 °C
Information on batteries:	
Battery model	: LR03/AAA
Battery manufacturer	: Naccon Power Technology Co., Ltd. 6F Block A, Dongshangang Industrial Park, Xixiang St., Baoan District, Shenzhen, P.R. China
Brand	: Naccon
Website	: http://www.naccon.com
Email address	: aguoguo@naccon.com
Date of manufacture	: 05/2026 Made in China
Manufactured by	: Jaxmotech GmbH, Ostring 60, 66740 Saarlouis, Germany info@jaxmotech.de

We reserve the right to make technical and design changes to the product as part of our ongoing product improvements.

Disposal

The product, its packaging and the supplied batteries have been manufactured from valuable materials that can be recycled. Dispose of the **packaging** at a recycling point that sorts materials by type. Make use of the local facilities provided for collecting paper, cardboard and lightweight packaging.

Appliances, single-use batteries and rechargeable batteries marked with this symbol must not be disposed of along with household waste! You are legally obliged to dispose of old appliances separately from household waste. Electronic appliances contain hazardous substances and, if stored or disposed of improperly, may cause harm to health and the environment. Information about collection points where old appliances can be disposed of free of charge is available from your local authorities.

Flat single-use and rechargeable batteries must be handed in at a local authority collection point or returned to a battery retailer. Tape off the contacts of lithium single-use/rechargeable batteries prior to disposal.

Model	: CTT 125
Manufactured by	: Jaxmotech GmbH, Ostring 60, 66740 Saarlouis, Germany info@jaxmotech.de

CE