Electric Bingo Game

en **Instructions for use**

At a glance (contents)

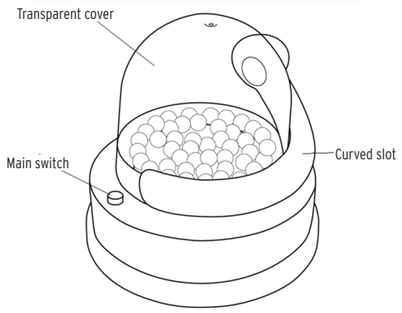

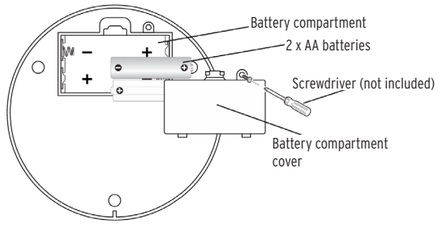



EG - DECLARATION OF CONFORMITY

The product described in this instruction manual complies with all relevant harmonized requirements of the EU. The complete declaration of conformity and instruction manual can be found online at www.jaxmotech.de/downloads.

About these instructions

This electric bingo game is an electrically operated toy intended for provides a fun way to generate numbers for family gatherings and holiday entertainment.

Read these instructions carefully before use and keep them for future reference. If you give this product to another person, remember to also include these instructions.

Signal words used in these instructions:
WARNING warns about the potential risk of serious or fatal injury.
CAUTION warns about the potential risk of minor injury.
NOTICE warns about the potential risk of material damage.

Symbols used in these instructions:

⚠ This symbol warns you about the risk of injury.

⚠ This symbol warns you about the risk of injury caused by electricity.

ⓘ This indicates additional information.

Safety warnings ⚠

⚠ **Warning -** Not suitable for children under 36 months. Small balls and small parts. Choking hazard.

Adult assembly/set-up is required. The transparent cover may only be opened by an adult. Keep loose balls away from children under 36 months.

Intended use

- This product is suitable for children aged 3 years and over only.
- Adult assembly/set-up is required. Adult supervision is recommended during play.
- The transparent cover may only be opened by an adult. Do not allow children to play with loose balls outside the transparent cover.
- Remove all packaging materials, bags, ties, fasteners and labels not intended to remain on the toy before giving the product to a child. Keep packaging materials away from children; they may pose a suffocation hazard.
- Stop using the product immediately if any part is damaged, loose, or broken.

General Safety

⚠ **Warning!** Not suitable for children under 36 months. Small balls and small parts. Choking hazard.

This toy must only be used under the direct supervision of an adult.

- Remove all packaging materials and fasteners before giving the product to a child.
- Read these instructions carefully and keep them for future reference.
- Do not use the product if any part is damaged, loose or broken. Stop using the toy immediately until it has been repaired or replaced.
- Do not put any objects other than the supplied bingo balls into the machine.
- Do not operate the toy when the transparent cover is removed or not securely locked.
- Keep fingers, hair and loose clothing away from moving parts during operation.
- Keep the product away from water and other liquids.

Battery Information

- Caution! There is a risk of explosion if batteries are replaced improperly. Replace batteries only with the same or an equivalent battery type.
- Always replace the entire set of batteries. Do not mix old and new batteries, or batteries of different types or brands.
- Ensure that the batteries are inserted correctly. Observe the polarity (+) positive / (-) negative on the battery and on the casing. Improperly inserted batteries can leak or, in extreme cases, cause a fire or explosion.
- Never expose batteries to excessive heat (e.g., direct sunlight, fire) and never throw them into fire. The batteries could explode.
- The terminals must not be short-circuited.
- Remove depleted batteries. Remove the batteries if you know that you will not be using the device for an extended period of time. Otherwise, the batteries could leak and cause damage.
- Keep batteries out of the reach of small children. If batteries are swallowed, seek medical help immediately.
- Non-rechargeable batteries must not be recharged.
- Rechargeable batteries must be removed from the device before recharging.
- Rechargeable batteries may only be recharged under adult supervision.
- If batteries leak, remove them from the battery compartment using a cloth and dispose of them properly. Avoid skin and eye contact with battery acid. If battery acid comes into contact with your eyes, rinse them thoroughly with water and contact a doctor immediately. If battery acid comes into contact with your skin, wash the area with plenty of soap and water.
- Keep new and used batteries away from children
- Do not use the product if the battery compartment cannot be securely closed and keep it away from children.
- Do not allow children to change batteries unsupervised.
- Do not short-circuit batteries. Do not over-discharge the battery.
- Remove used batteries from the device immediately and dispose of them properly.
- Batteries must be inserted and replaced by an adult.
- Remove the batteries if the product will not be used for an extended period of time.

Use

⚠ **DANGER to children**

Keep the packaging materials out of the reach of children. They pose several risks, including the risk of suffocation!

WARNING: CHOKING HAZARD – This product contains small balls accessible upon opening the transparent cover; it must be handled exclusively by adults and kept strictly away from children.

Prior to first use

1. Remove all parts from the packaging and compare them to the parts list.
2. Do not use the toy if any part is missing or defective.
3. Clean all parts as described under "Cleaning and storage".
4. Turn the transparent cover anti-clockwise and remove the transparent cover.
5. Insert the balls into the machine
6. Close the cover.
7. Align the tab with slot on the base, then turn the cover clockwise to tighten it.

Inserting and replacing the batteries

1. Turn the machine over to locate the battery compartment.
2. Loosen the battery compartment cover screw by using a Phillips screwdriver and remove the cover.
3. Insert two AA batteries into the compartment, ensuring the correct polarity (+/-) is observed.
4. Replace the battery compartment cover and tighten the screw. Do not overtighten.

Preparing for the Game

1. Place the base on a flat, stable surface.
2. Check that all bingo balls are inside the transparent cover and that the cover is securely attached to the base.
3. Press and hold the button on the front of the base to spin the bottom plate and mix the balls.
4. Balls will bounce inside the dome and automatically roll down into the curved slot.
5. Once the drawn ball rests in the curved slot, release the button to stop the machine.
6. Read the numbers on the balls that have rolled into the slot and mark them on your bingo cards.
7. The first player to complete a straight line (horizontally, vertically, or diagonally) on their card and call "BINGO!" wins the game.
8. After the round, an adult should return the balls to the transparent cover and make sure the cover is securely locked before the next game.

Cleaning and storage

Important cleaning instructions:

- Switch off the product and remove the batteries before cleaning.
- Wipe the product with a dry or slightly damp soft cloth.
- Do not wash or immerse the electronic parts in water.
- Do not use aggressive cleaning agents or solvents.
- When the product is not used for an extended period of time, remove the batteries to prevent leakage and damage.

Storage when not in use:

- If you are not going to use the bingo game for an extended period of time, please remove the batteries to prevent leakage and damage to the electronics. Store the product in a dry place.
- Store the product, bingo balls and cards in a dry place out of reach of children under 36 months.

Technical specifications

Model	: TG 156
Product number	: 749834
Batteries	: 2 x LR6 (AA) / 1.5V ⎓
Ambient temperature	: +10 to +40 °C

Information about the supplied batteries:

Battery Manufacturer	: Naccon Power Technology Co.,Ltd, 6F Block A, Dongshangang Industrial Park, Xixiang St., Baoan District, Shenzhen, P.R.China
Model	: LR6/AA
Website	: http://www.naccon.com
E-mail	: aguoguo@naccon.com
Manufacturing date	: 06/2026
Made in	: China
Manufactured by	: Jaxmotech GmbH, Ostring 60, 66740 Saarlouis, Germany info@jaxmotech.de

In the course of product improvement, we reserve the right to make technical and optical modifications to the product.

Disposal

The product, its packaging and the supplied batteries have been manufactured from valuable materials that can be recycled. Recycling reduces the amount of refuse and preserves the environment. Dispose of the **packaging** at a recycling point that sorts materials by type. Make use of the local facilities provided for collecting paper, cardboard and lightweight packaging.

Appliances, single-use batteries and rechargeable batteries marked with this symbol must not be disposed of along with household waste! You are legally obliged to dispose of old appliances separately from household waste. Electronic appliances contain hazardous substances and, if stored or disposed of improperly, may cause harm to health and the environment. Information about collection points where old appliances can be disposed of free of charge is available from your local authorities. Flat single-use and rechargeable batteries must be handed in at a local authority collection point or returned to a battery retailer. Tape off the contacts of lithium single-use/rechargeable batteries prior to disposal.

Model	: TG 156
Manufactured by	: Jaxmotech GmbH, Ostring 60, 66740 Saarlouis, Germany info@jaxmotech.de

CE