LED Christmas tree candles

(en) **Instructions for use**

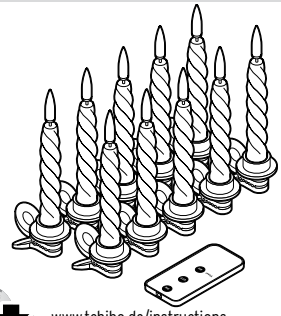

www.tchibo.de/instructions

Made exclusively for:
Tchibo GmbH, Überseering 18,
22297 Hamburg, Germany

Safety warnings

Please read the safety warnings carefully and only use the product as described in these instructions in order to avoid accidental injury or damage.

Keep these instructions for future reference. If you give this product to another person, remember to also include these instructions.

- Not a children's toy! Use only under adult supervision. Keep small swallowable parts and packaging materials out of the reach of children. They pose several risks, including the risk of suffocation!
- The product is only suitable for decoration and not for lighting whole rooms. It is designed for home use and is not suitable for commercial purposes.
  The product is intended for use in dry indoor rooms only. Protect the product from moisture.
- Do not switch the product on while it is still in the packaging.
- The built-in LEDs cannot and must not be replaced.
- **The outer surface of the LED candles is made of real wax.** Protect it from naked flames, heat and direct sunlight. Do not use any real candles directly next to the LED candles. Do not light the wicks!
- Handle the product with care. Knocks, shocks and falls, even falls from a low height, may damage the product. For this reason, do not attach the candles to thin branches that could break.

The product contains a lithium battery (coin battery). There is a risk of leakage, gas emissions, explosion and fire:

- Swallowing batteries can be fatal. The remote control is fitted with a coin battery. Swallowing a coin battery can cause severe internal chemical burns and even death within 2 hours. Keep both new and used batteries out of the reach of children. If the battery compartment does not close correctly, discontinue use of the remote control and keep it out of the reach of children. If you think a battery has been swallowed or has entered the body in any other way, seek medical advice immediately.
- Batteries may only be inserted or replaced by adults.
- Warning! Lithium batteries can explode if inserted incorrectly. Ensure that the polarity is correct (+/–) when inserting the battery in the remote control. Use only batteries of the same or of equivalent type (see "Technical specifications").
- If necessary, clean the contacts on the device and batteries before inserting the batteries. Risk of overheating!
- Single-use batteries must not be charged, taken apart, thrown into fire or short-circuited. Do not modify, deform, heat or dismantle batteries. Do not allow damaged batteries to come into contact with water.
- Batteries must not be overdischarged. Store unused batteries in the original packaging. Do not bring unpacked batteries (both new and partially/fully used) into contact with each other and keep them away from metal objects.
- Protect batteries from excessive heat (heaters, direct sunlight). Remove the batteries immediately from the product when they are flat or if you do not intend to use the product for a prolonged period. This will help prevent damage caused by leakage.
- If a battery has leaked, avoid all contact with your skin, eyes and mucous membranes. Rinse the affected areas with plenty of clear water if necessary and consult a doctor immediately.

Use

Inserting the battery into the LED candles

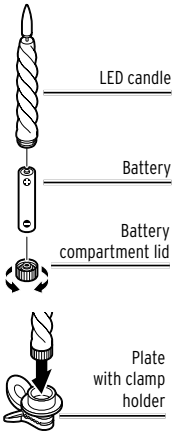

1. Remove the lid of the battery compartment of the candle by turning it anti-clockwise.
2. Insert the battery as illustrated. In doing so, make sure that the polarity is correct (+/–).
3. Screw the battery compartment lid back on by turning it clockwise.

The candle will light up once the lid of the battery compartment is securely closed.

4. Place the candle, with the battery compartment lid in place, onto the candle plate.

Activating the remote control



The remote control comes fitted with an insulating strip to protect the battery.

▷ To activate the remote control, pull the insulating strip out of the battery compartment.

Using the remote control

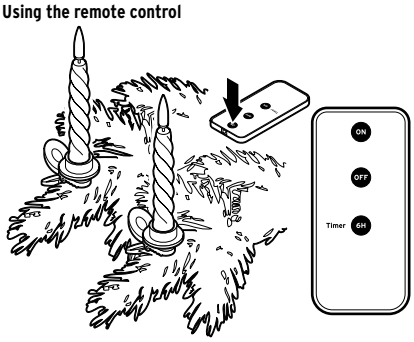

The remote control has a range of approx. 5 m and will detect candles within a radius of approx. 50 cm.

Point the remote control in the direction of the candles. Ensure there are no objects blocking the space between the remote control and the candles.

Switching the LED candles on and off permanently

▷ Press the **ON** button on the remote control to switch the LED candles on permanently.

▷ Press the **OFF** button on the remote control to switch the LED candles off permanently.

Switching the LED candles on in timer mode

▷ To switch the LED candles on in timer mode, press the **6H** button on the remote control.
The LED candles will flash once and then stay lit for **6 hours**. They will then switch off automatically for **18 hours**, then back on again for 6 hours, and so on.

▷ Press the **OFF** button on the remote control to deactivate timer mode and switch the LED candles off prematurely.

Changing the battery in the remote control

If the LED candle no longer responds to the remote control, the battery must be replaced. The battery compartment is located on the back of the remote control, at the bottom.



1. Press the small lever in and pull out the battery holder.



2. Replace the flat battery with a new one (see "Technical specifications"). When doing so, make sure that the polarity is correct (**+** symbol facing upwards).



Touching the battery with bare hands may cause contamination on the contacts, and this may have an insulating effect. Use a dry, soft cloth to insert the battery.

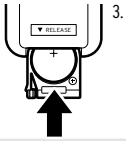

3. Push in the battery holder completely. You should feel and hear it click into place.

Technical specifications

Model:	764 760
Candles	
Single-use battery:	12x LR03 (AAA)/1.5V (ZnMnO2)
Bulb:	LED
Remote control	
Single-use battery:	1x CR2025/3V (Li)
(tested as per UN 38.3)	Watt-hour rating 0.45 Wh
Range:	5 m
Operating time:	approx. 100 hours (with 1 set of batteries)
Ambient temperature:	+10 °C to +40 °C

In the course of product improvement, we reserve the right to make technical and optical modifications to the product.

Disposal

The product, its packaging and the batteries provided have been manufactured from valuable materials that can be recycled. Recycling reduces the amount of refuse and preserves the environment.

Dispose of the **packaging** at a recycling point that sorts materials by type. Make use of the local facilities provided for collecting paper, cardboard and lightweight packaging.



Devices, **single-use batteries** and **rechargeable batteries** marked with this symbol must not be disposed of along with household waste!

You are legally obliged to dispose of old devices separately from household waste. Electronic devices contain hazardous substances and, if stored or disposed of improperly, may cause harm to health and the environment. Information about collection points where old devices can be disposed of free of charge is available from your local authorities. Flat single-use and rechargeable batteries must be handed in at a local authority collection point or returned to a battery retailer. Tape off the contacts of lithium single-use/rechargeable batteries prior to disposal.

Product number:
764 760