

2-Litre Aluminium Thermal Jug for Coffea Filbii

en Instructions for use

Dear Customer

Your new 2L thermal jug...

- ... comes with an insulating double-walled stainless steel insert which keeps drinks hot or cold for a long time and allows them to be stored with no changes in taste
- ... has a built-in pouring lever for easy, accurate and even pouring
- ... contains magnets enabling automatic detection when inserted into the Coffea Filbii, allowing for accurate dispensing of water

To ensure the best possible flavour, the jug should only be used as a tea or coffee jug. This prevents any unpleasant tastes from developing.

Barista tip: The insulating effect of the jug works best if you rinse out the jug with hot water to pre-heat it before brewing coffee.

Filling the jug completely will also ensure it stays warm for longer.

We hope you enjoy brewing delicious coffee with this product.

Your Tchibo Team

ally be sant to tiff fore


The compact of the compa

Capacity: approx. 2.2 litre Coffea Filbii amount dispensed: approx. 2 litres EN norm: EN 12546

Tchibo GmbH D-22290 Hamburg · 86001647ABXX · 2023-07

Safety warnings 4





- The jug is designed for use with the Coffea Filbii coffee machine for preparing coffee.
- The jug is intended for commercial use. In this case, it must be used and cleaned by trained personnel.
 Maintenance that goes beyond cleaning and descaling is not necessary for this machine.
- DANGER risk of injury/risk of death due to magnetism for those with pacemakers/endoprostheses:

 The product contains neodymium magnets (closure at the top and base of jug). Magnets may impair the function of pacemakers or have an effect the correct position of endoprostheses inside the body. Therefore, ensure you carry the jugs and the filter holder away from your body. Consult your doctor before using the product.
- WARNING risk of scalds: Hot steam and hot liquids can cause scalding. Take care when handling the filled jug.
- Do not pour carbonated drinks into the thermal jug.

Do not transport the thermal jug horizontally or liquid may leak out!

The thermal jug is intended to be carried and used in an upright position. Handle the

jug with care and avoid tilting it, placing it on a slant, or knocking or dropping it, otherwise this may result in leaks, breakage and other damage to the product.

• Do not use caustic or abrasive agents or hard brushes, etc. for cleaning.

- Only use the cleaning agents and cleaning utensils specified in these instructions to clean the jug (also see the section titled "Cleaning the jug"). The use of other cleaning agents can lead to health hazards.
- The thermal jug must not be used to keep dairy products or baby food warm, as bacteria might spread uncontrollably.
- To ensure that the plastic parts do not melt, do not place the jug on a hob or immediately next to a hot oven, radiator or anything similar.
- Keep cards with magnetic strips, such as credit or debit cards, away from the filter holder, the base and the closures of the jug, and their built-in magnets. The cards could become damaged. You should also keep magnetic storage media and all devices that are influenced by magnetism or which could suffer functional impairment away from the product.

Cleaning sachets for coffee jugs

60 pks., 10 g each

product no. 458433

available at:

Tchibo Coffee Service

Webpage www.tchibo-coffeeservice.de

tel. Hotline 0800 130 22 68



www.tchibo-coffeeservice.de/kundendienst-und-support/

Product numbers:

Thermal jug 2L 504 329 (silver) **504 330** (black)

86001647 en 2L-Kanne v2.indd 1 26.07.23 13:43

Removing protective films and packaging materials

Take the jug out of the packaging. Remove all packaging material.
 Check that all parts are included and intact.



2. Pull the protective film off the magnetic closure before use.

Cleaning before use

Clean the jug thoroughly before use (see section "Cleaning the jug").

Filling the jug




Opening the jug:

Flip back the carrying handle so it sits at the back of the iug.

Press both of the buttons on the side and lift the lid upwards.


The pump insert remains inside the coffee machine during brewing and the magnetic closure remains pushed down.

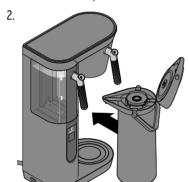

Filling the jug: Slide the jug underneath the filter holder of the Coffea Filbii Coffee Machine.



Once the jug is full, remove it from the coffee machine and place the lid on top (pushing it down firmly until you hear and feel it click into place).

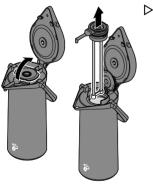

To fill it by hand, flip open the magnetic closure and remove the pump insert.

Fill the jug with coffee no higher than 5 cm below the opening.

Place the pump insert back into the jug.

Pouring coffee




- 1. Flip up the pump lever until it locks into place.
- 2. Hold a cup underneath the spout.
- Slowly and evenly press down the lever and repeat until the cup is full.

Do not use force to push down the pump lever.

Made exclusively for:

Tchibo GmbH, Überseering 18, 22297 Hamburg, Germany

Closing the jug



Caution! Only transport the filled jug when the lever is in a lowered position.

➤ To lower the pump lever into this starting position, lift the pump lever slightly (4a) until you can push down the small support lever (4b).

Now lower the pump lever again (4c).

Cleaning the jug

- The parts of the jug are not dishwasher-safe.
 Also do not submerge the body of the jug in water.
 Do not use any abrasive products for cleaning.
- Clean the jug and lid daily under running water with a mild washing-up liquid.
- Clean the jug thoroughly by hand once a week with the cleaning product recommended for coffee jugs. Following the instructions provided by the manufacturer of the cleaning product.



Effective cleaning results can be obtained by using the recommended cleaning sachets for coffee jugs (product no. 458433, 60 pk., 10 g each).



WARNING - risk of fire, injuries, damage to health and the environment

Observe the safety information provided by the manufacturer when using the cleaning product:








Oxidising! Corrosive!

Harmful to health!

- Wear eye/face protection during use.
- IN CASE OF CONTACT WITH THE EYES: Carefully rinse out the affected eye with water for a few minutes. Where possible, remove any contact lenses. Continue to rinse the affected eye. If necessary, contact a doctor.

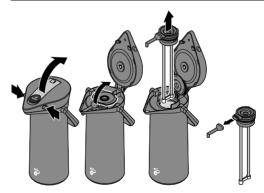

- 1. Remove the lid and flip open the magnetic closure until it locks into place. Remove the pump insert and clean it separately.
- 2. Fill the jug with hot water.
- 3. Add the contents of a cleaning sachet. Leave the solution for a few minutes to take effect, but no longer than 30 minutes.
- 4. Brush the jug with a soft cleaning brush.
- 5. Pour out the solution before thoroughly and repeatedly rinsing out the jug with tap water!
- ▶ Leave the clean jug with the lid open to allow it to dry well and prevent any mould from forming.

86001647 en 2L-Kanne v2.indd 2 26.07.23 13:43